



OWNER'S MANUAL



+84 931 707 793


www.aardwolf.com.au

info@aardwolf.com.au

AARDWOLF

HAND TRUCK


AHT-750H

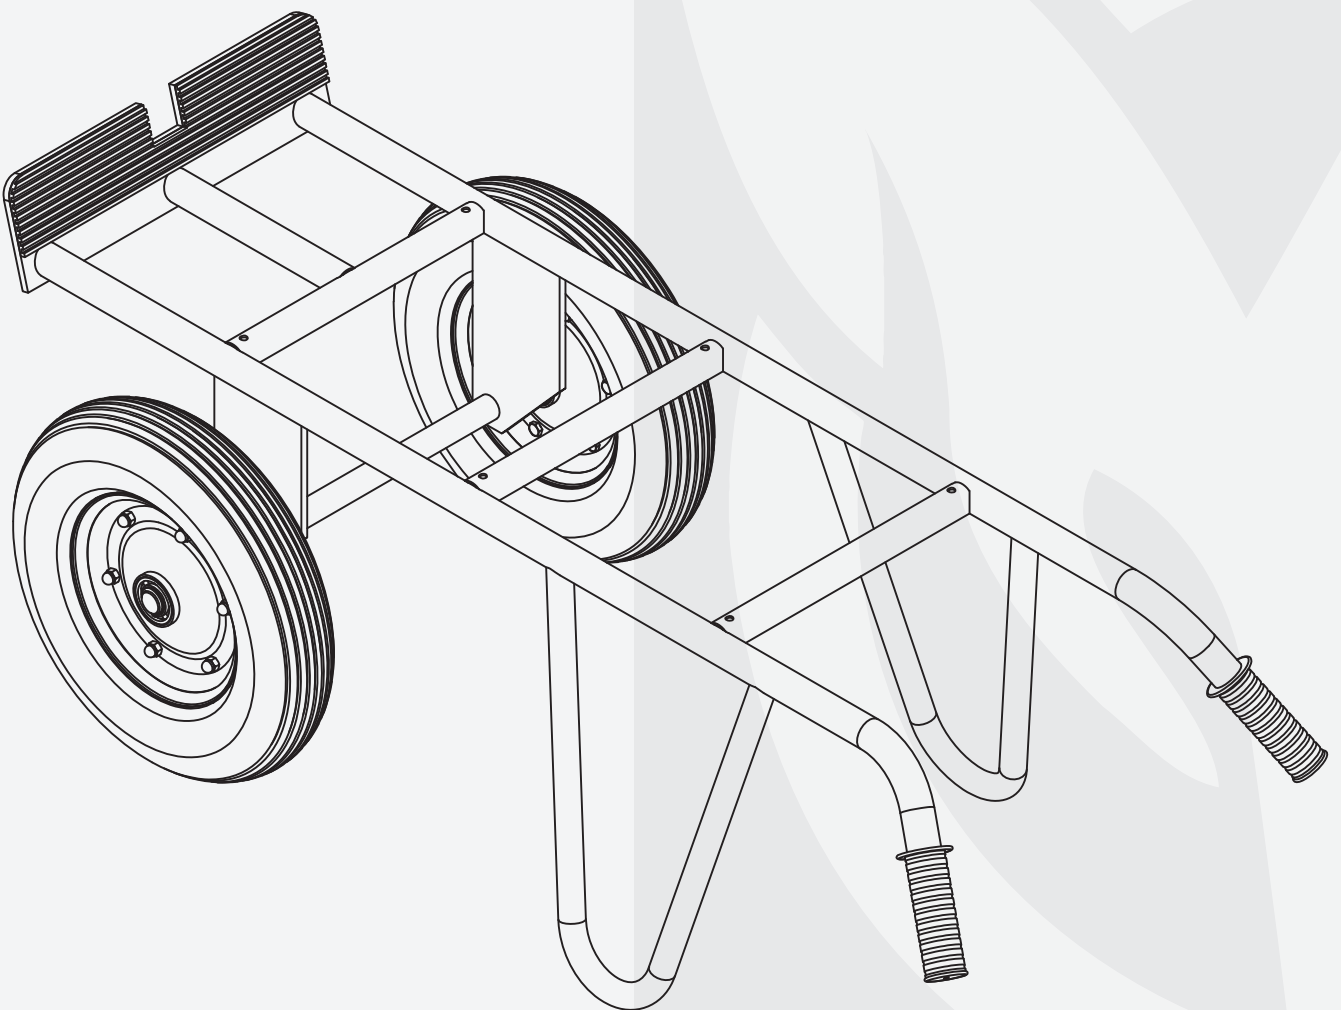


August, 2022

GENERAL SAFETY INSTRUCTIONS

- Inspect before each use for damaged and loose fasteners/connections.
- Inspect the product for cracks, wear or damage. Replace damaged components immediately.
- Keep hands and feet away from all moving parts.
- Operate safely; go only as fast as safety considerations allow.
- Do not use this product to transport people.
- Do not drive off curbs or high ledges.
- Never use it on a moving vehicle.
- Always stand beside the hand truck, walking forward while operating in reverse.
- Never walk backwards with the hand truck.
- Never exceed the rated capacity, especially on ramps or hills. Doing so could cause damage to the hand truck and injury to personnel.

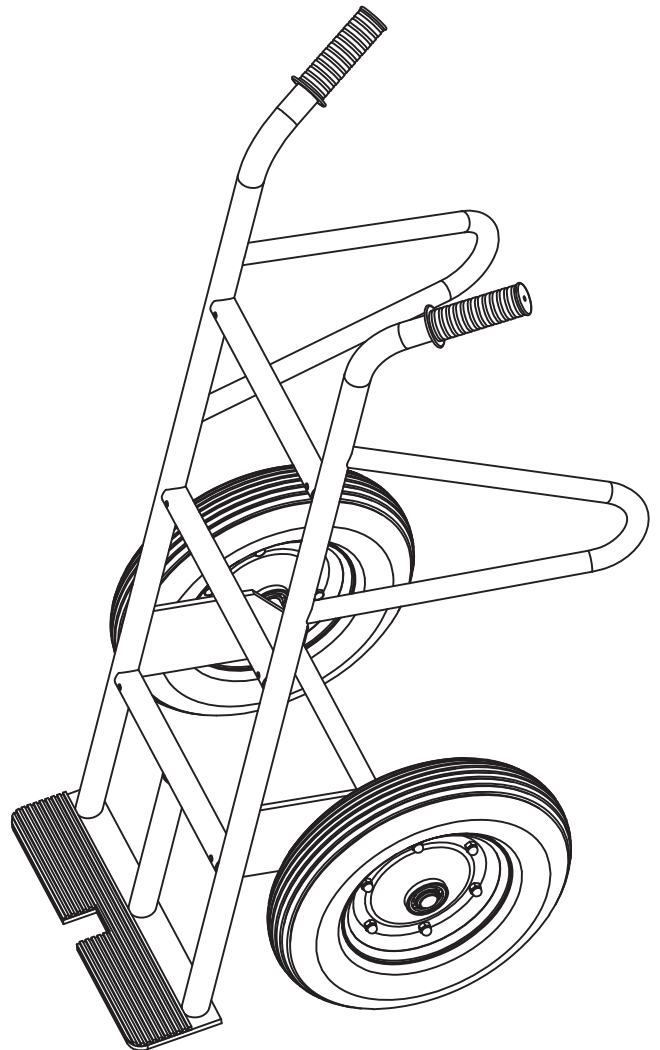




DRAWING LIST

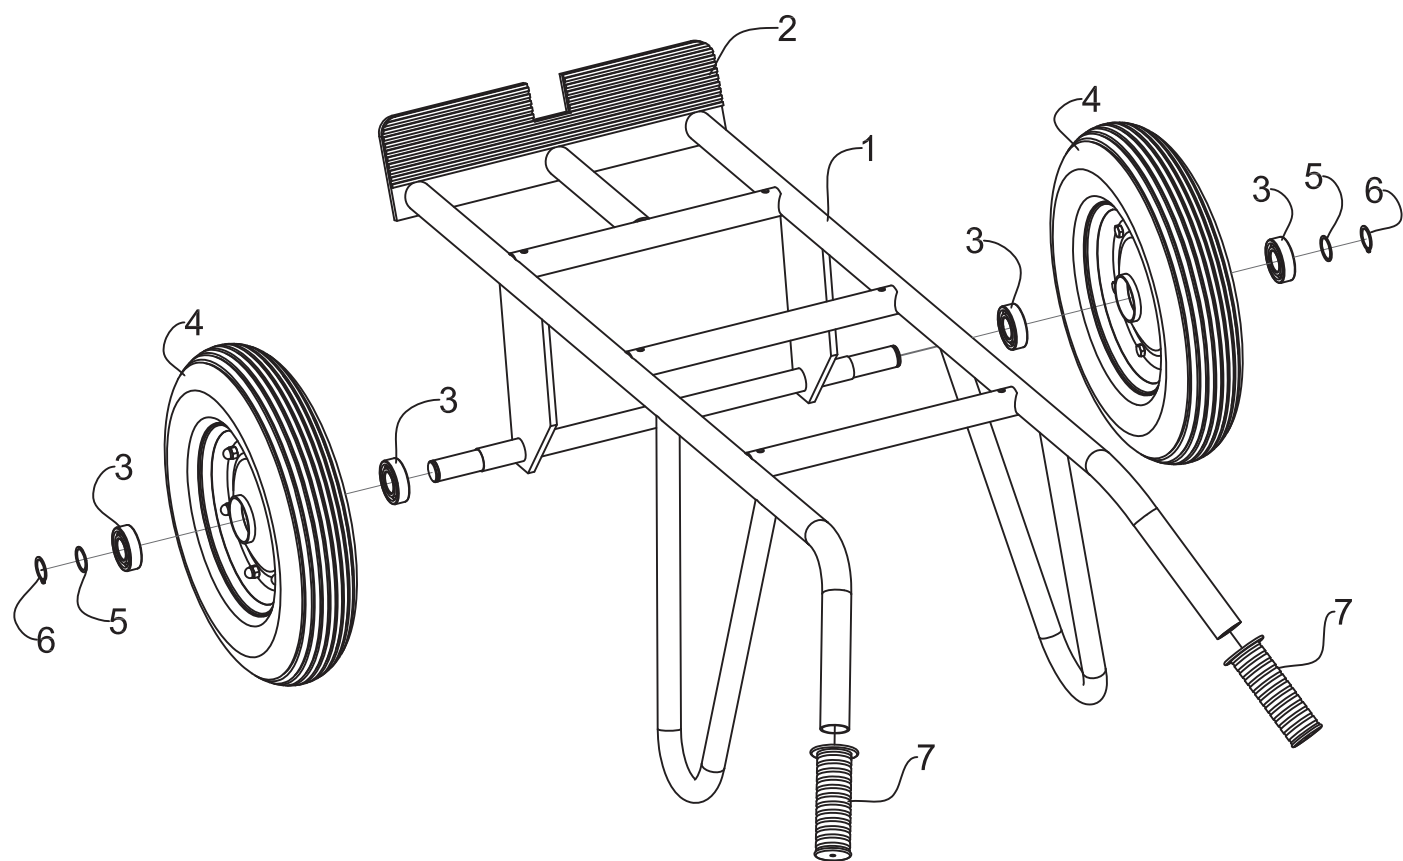

PARTS LIST

No.	Code	Name Part	Qty.
01	AHT-750H-01	Frame	01
02	AHT-750H-02	Rubber	01
03	AHT-750H-03	Bearing 6205	04
04	AHT-750H-04	Wheel 4.80/4.00-8	02
05	AHT-750H-05	Washer Ø25	02
06	AHT-750H-06	Circlip Ø25	02
07	AHT-750H-07	Rubber handle	02

DIMENSIONS

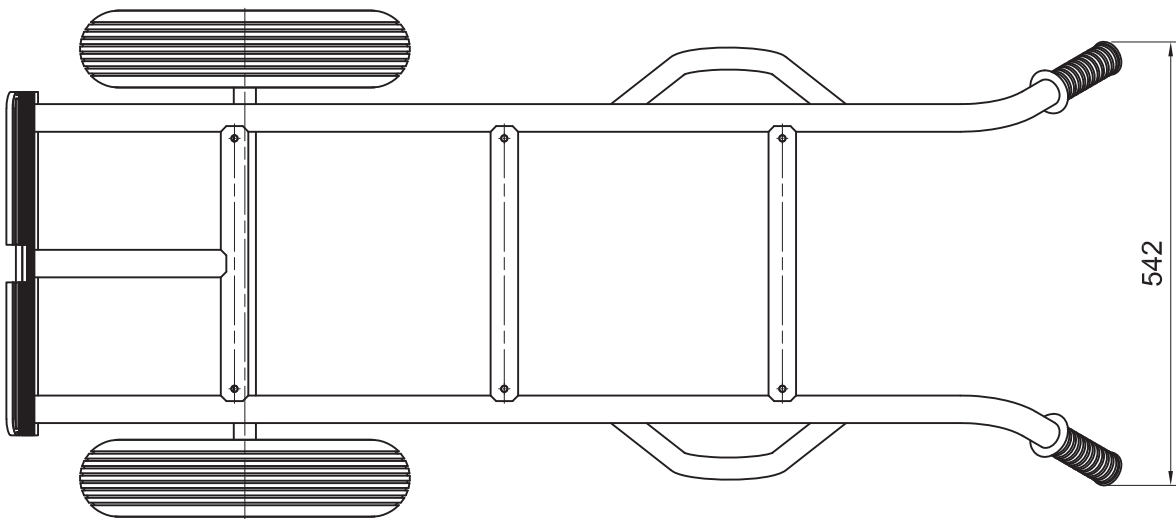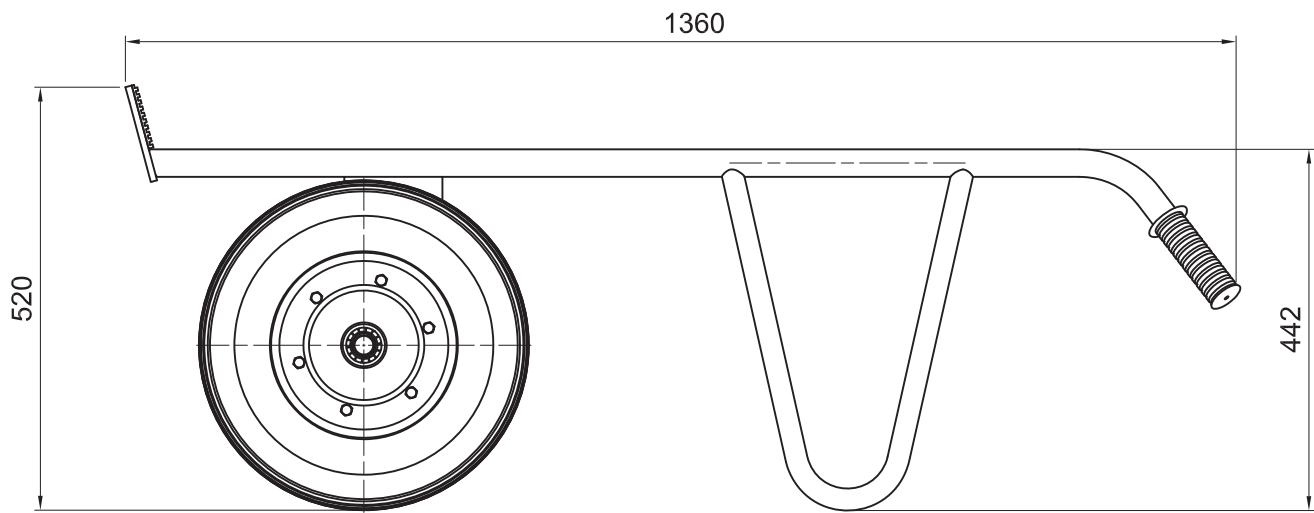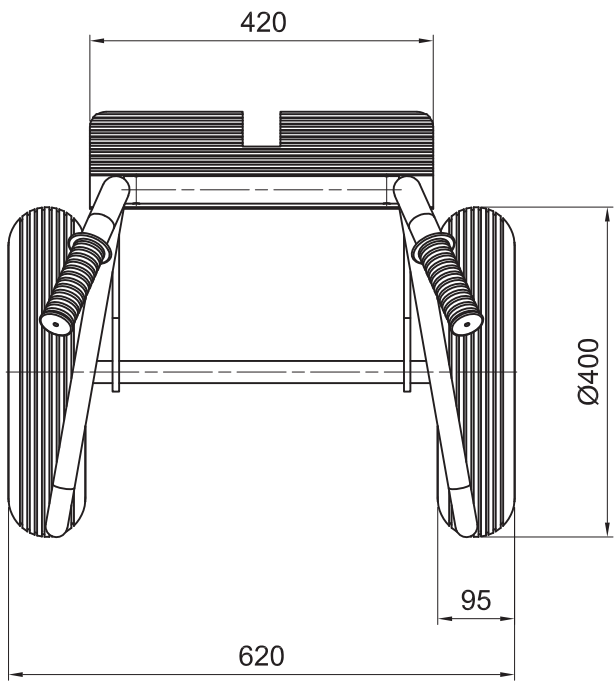

FEATURES

- Robust steel construction, wooden bearing surface, rubber grips, and rubber-coated plate.
- Stationing supports.
- Aardwolf standard hand truck makes transporting boxes, small furniture and appliances easier.
- With the loading capacity of 750 kg – 1653 lb, it allows you to haul large and heavy loads in fewer trips.
- 1360 mm (53.5 in) height promotes high stacking, so you can safely pile on more stuff.
- Converts positions in seconds.
- Oversized base for large loads.
- 400 mm (15.7 in) flat-free pneumatic wheel diameter is ideal for all surfaces.

SPECIFICATION

AHT-750H	Metric	Imperial
Height	1360 mm	53.5 in
Track width	620 mm	24.4 in
Blade dimension	420 x 60 mm	16.5 x 2.4 in
Pneumatic wheel diameter	400 mm	15.7 in
Working load limit	750 kg	1653 lb
Net weight	29 kg	64 lb
Gross weight	29.2 kg	64.4 lb
Packaging dimension	1380 x 620 x 460 mm	54.3 x 24.4 x 18 in

INSTRUCTIONS FOR USE

- When loading hand trucks, keep your feet clear of the wheels.
- Do not exceed the manufacturer's load-rated capacity; read the capacity plate on the hand truck if you are unsure.
- Place the load so it will not slip, shift or fall; use the straps, if provided, to secure the load.
- For extremely bulky or pressurized items such as gas cylinders, strap or chain the items to the hand truck.
- Tip the load slightly forward so that the tongue of the hand truck goes under the load
- Push the tongue of the hand truck under the load that is to be moved.
- Keep the load's centre of gravity as low as possible by placing heavier objects below the lighter ones.
- Push the load so the axle, not the handles, will carry the weight.
- If your view is obstructed, ask a spotter to assist in guiding the load.
- Do not walk backwards with the hand truck unless going upstairs or on ramps.
- When going down an incline, keep the hand truck in front of you so it can be controlled at all times.
- Move hand trucks at a walking pace.
- Store hand trucks with the tongue under a pallet, shelf, or table.

INSPECTIONS, MAINTENANCE AND REPAIR

- Before each use, check for damaged or missing components. Replace broken or missing pieces immediately with Aardwolf replacement parts.
- Check all fasteners, and make sure to tighten or replace loose or missing hardware.
- Check welds and material near welds for cracking or damage.
- Make sure that the pneumatic wheels are correctly inflated.
- Store the hand truck in good condition to increase its life.

WARRANTY

At the time of delivery, it is necessary to check that the clamp has not been damaged during shipment. Any claims must be presented within eight days of the product's delivery date. We grant you one year warranty on the Aardwolf Hand Truck counted from the date of purchase.

The warranty coverage is not applicable if:

- The hand truck is mishandled during manoeuvring.
- The operator fails to comply with the instructions in this booklet.
- The product's maximum permissible capacity is exceeded.
- The specifications for the hand truck are not followed.
- Damages are due to inadequate maintenance and inspections.
- Damage is due to improper storage.
- The user performed repairs without our permission.
- The user uses non-original spare parts from the Aardwolf brand.



WE ARE PROVIDING

SIMPLE, REALIABLE, COST SAVING
AND **AWESOME IDEAS** FOR YOUR BUSINESS



AARDWOLF PRODUCT VIDEO
www.youtube.com/user/AardwolfGroup



FIND YOUR NEAREST AARDWOLF FACTORY SERVICE CENTRE NEAR YOU

AUSTRALIA

1/5 Stanton Road, Seven Hills NSW 2147

Tell: 02 9838 8427

Web: www.aardwolfaustralia.com **Email:** enquiries@aardwolfaustralia.com

BULGARIA Str.Usta Kolio Ficheto 33 **Tell:** +359 887 933 754

INDIA

Harmara Road, Industrial Area, Madanganj, Kishangarh, District- Ajmer,
Rajasthan India 305801

Web: www.aardwolf.co.in

Tell: +91 73000 68444

Email: sales@aardwolf.co.in

GERMANY

Schulze-Delitzsch-Weg 2, 33175 Bad Lippspringe

Tell: 05252 8382830

USA

19201 South Reyes Avenue, Suite A3 Rancho Dominguez California,

Tell: (562) 553-6050

90221

Web: www.aardwolfusa.com

Email: leo@aardwolfusa.com

VIETNAM

1B, An Phu, Thuan An City, Binh Duong Province, Vietnam

Tell: +84 931 707 793

Web: www.aardwolf.com.au

Email: info@aardwolf.com.au