


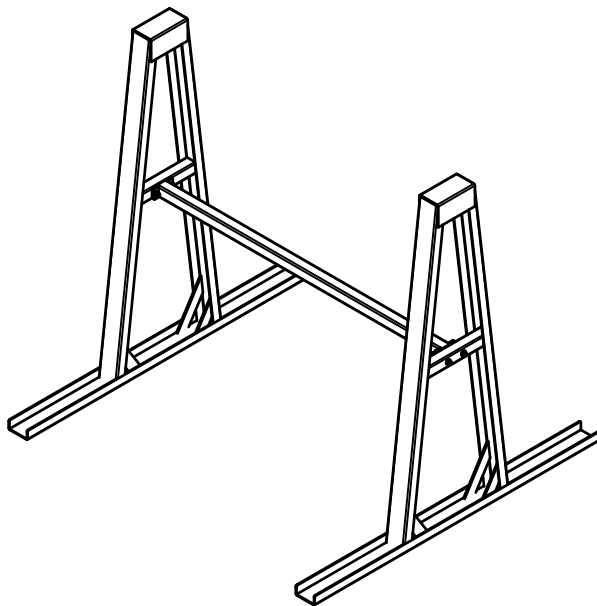

STORAGE A-FRAME

OWNER'S MANUAL

PRODUCT CODE: SAF02-S





CONTENTS

GENERAL ► SPECIFICATIONS & FEATURES ► SAFETY INSTRUCTIONS ► INSTRUCTIONS FOR USE
PART DRAWING & PART LIST ► INSPECTIONS, MAINTENANCE & REPAIR ► WARRANTY

The Aardwolf 'A' Frame SAF02-S is a basic 'A' Frame for supporting slabs of natural and engineered stone. 4"x2" C channel on the bottom allow timber gluts to put into the channel if preferred. Steel cross member and fasteners included.



SAF02-S	Metric (mm-kg)	Imperial (inch-lb)
Working load limit	10800	23810
Height handle full slabs	1500	59"
Dimensions	1510 x 1500 x 1500	59.44" x 59.05" x 59.05"
Net weight	48	106

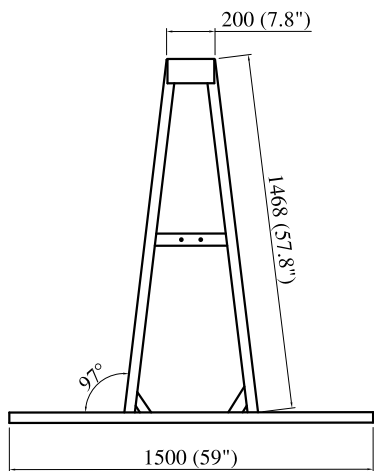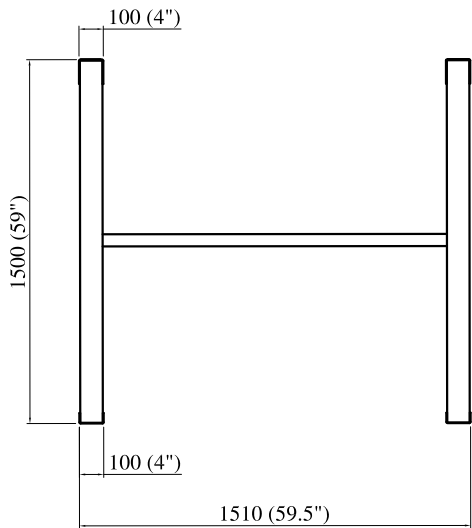

- Steel construction.
- Full slab design.
- Sold and used as a set.
- Durable powder coat finish for weather protection.
- Holes in the base rail drain water to reduce corrosion.
- **Optional extra:** Timber gluts for base.

Before operation:

- Make sure that the Storage A-Frame is placed on a flat and smooth surface.
- Confirm all the welded joints are free from any defects or damage, such as separation, crack, and so forth.
- Make sure that all the bolts are securely tightened.
- Use appropriate safety equipment to protect against injury.
- If the Storage A-Frame combines with other attachments such as a forklift truck, the user must determine whether the capacity of a crane or other hoist fits with the frame's capacity.
- Perform a load test for the frame before transporting/moving/storing the stone.

During operation:

- The materials should be restrained in a proper manner during storage.
- The materials should be evenly loaded on both sides of the Storage A-Frame.
- Make sure the weight of the materials being placed is within the specified working load limit.
- Follow the steps and instructions in this operation manual.

After operation:

- Clean the Storage A-Frame thoroughly after each use.
- Store the frame in a cool and dry place.




Step 1: Check the Storage A-Frame to ensure the frame is tightly and safely before storing the materials.


Step 2: Place the marble and granite slabs on the Storage A-Frame by combining with the Aardwolf Slab Lifter (Standard or Automatic versions) and the Forklift Boom that are attached them with the forklift truck to put each slab slowly on the frame.

Note: The combination between the Aardwolf Slab Lifter and the Forklift Boom to forklift truck must be tightly before moving the slabs to the frame.

Step 3: The slabs should be evenly loaded on both sides of the frame so that it is balanced. The working load is within the specified limit.

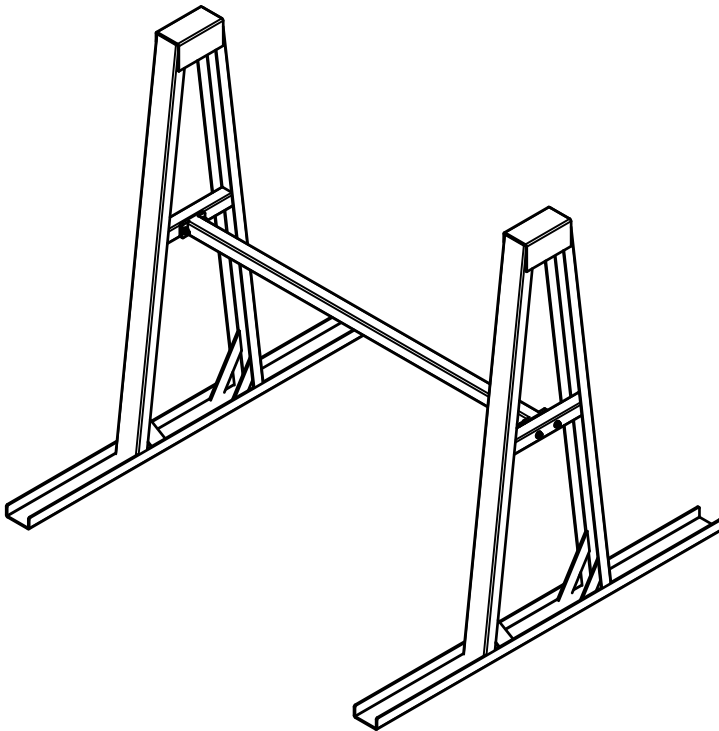

STORAGE A-FRAME SAF02-S
ASSEMBLY DIAGRAM

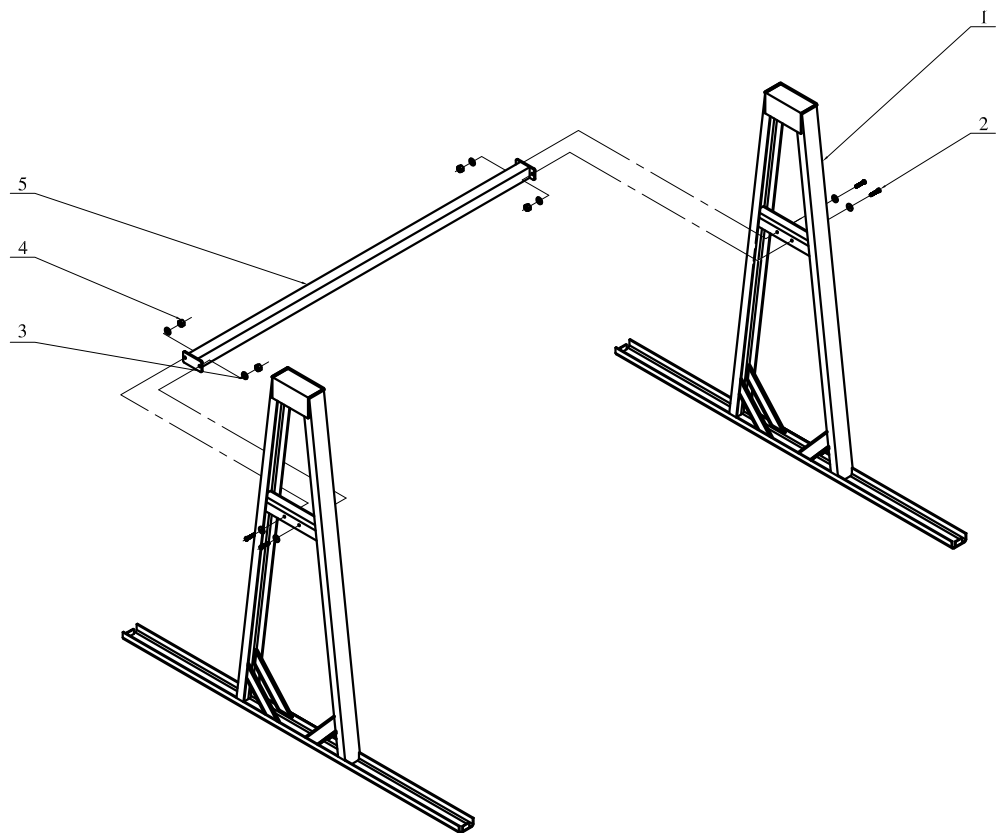

CODE	POSITION	DESCRIPTION	QTY
SAF02S-001	1	A-Frame Left & Right	02
SAF02S-002	2	Hexagon Bolt M10x80	04
SAF02S-003	3	Washer Ø10	08
SAF02S-004	4	Hexagon Nut M10	04
SAF02S-005	5	Cross Bar	01

Please note: When assembling match number on upright with number on base




- Make a regular procedure for the frame inspection and maintenance.
- The frequency of inspection will depend upon the amount of use of the frame.
- Maintenance should be conducted in a written record, indicating inspection dates, the condition of the frame on each of those dates, and any repairs made.
- Always keep necessary spare parts on hand and use only original spare parts when carrying out repairs or maintenance.
- Nuts and bolts need to be checked and tightened on a regular basis.
- Ensure that the welded joints are free from any defects or damage like separation, cracks, etc.
- Make sure that all the rubber parts are in a sound condition, that they do not cause damage during operation as well as for the materials being loaded.
- Store the frame in a cool and dry place.

WARRANTY

At the time of delivery, it is necessary to check that the Storage A-Frame SAF02-S has not been damaged during shipment. Any claims must be presented within eight days from the date of delivery. We grant one year warranty on the Storage A-Frame from the date of purchase (Do not include the rubber layers).

Warranty coverage is not applicable:

- The operator failed to comply with the instructions in the manual.
- The specifications are not followed.
- Damages are due to inadequate maintenance and inspections.
- Damages are due to improper storage and/or usage.
- Repairs were performed by the user without our permission.
- Non-original spare parts were used.

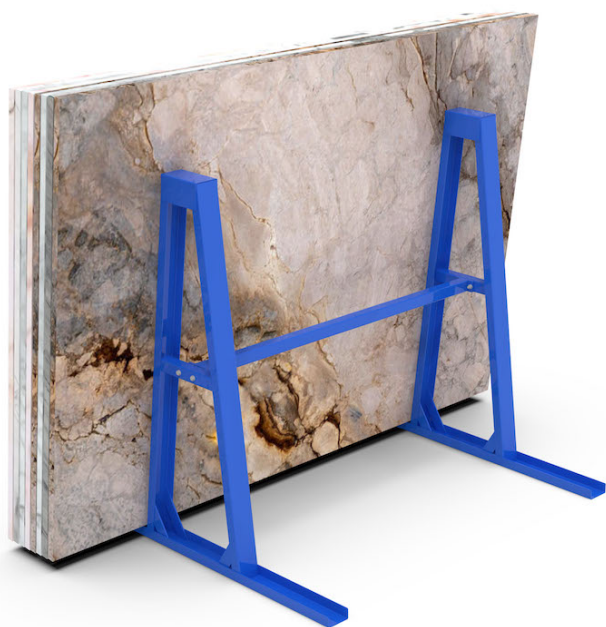



AMERICA



AARDWOLF AMERICA

- 📍 19201 S Reyes Avenue, Unit C7
Compton California, 90221
- ☎ (562) 553-6050
- ✉ leo@aardwolfusa.com
- 🌐 www.aardwolfusa.com

AUSTRALIA



AARDWOLF AUSTRALIA

- 📍 1/5 Stanton Road,
Seven Hills NSW 2147
- ☎ +02 9838 8427
- ✉ enquiries@aardwolfaustralia.com
- 🌐 www.aardwolfaustralia.com

GERMANY



STONE GLASS EQUIPMENT UG

- 📍 Am Gutstüch 11, 8451 Crimmitschau
Blankenhain, Germany.
- ☎ +49 366 0811 9236
- ✉ sales@aardwolf.com.de
- 🌐 www.aardwolf.com.de

INDIA



AARDWOLF NORTH INDIA

- 📍 Harmara Road, Industrial area,
Madanganj, Kishangarh. District-
Ajmer, Rajasthan. / Pin 305801
- ☎ Tel: 7300068444 / 8824336757
- ✉ sales@aardwolf.co.in
- 🌐 Web: www.aardwolf.co.in

VIETNAM



AARDWOLF VIETNAM

- 📍 1B, An Phu, Thuan An,
Binh Duong, Vietnam.
- ☎ +84 274 371 2827438/39
- ✉ sales@aardwolf.com.au
- 🌐 www.aardwolf.com.au

