


STORAGE A-FRAME

OWNER'S MANUAL

PRODUCT CODE: SAF03

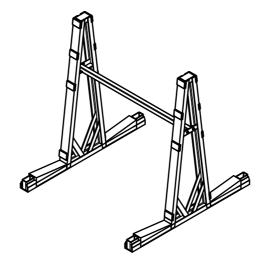


CONTENTS

GENERAL ● SPECIFICATIONS & FEATURES ● SAFETY INSTRUCTIONS ● INSTRUCTIONS FOR USE PARTD DRAWING & PART LIST ● INSPECTIONS, MAINTENANCE & REPAIR ● WARRANTY

The heavy-duty Aardwolf 'A' Frame SAF03 has been designed for unpacking slabs from wooden crates. Large angled lacquered wooden gluts fitted in the base channel create a bias so that the slabs fall towards the frame. Strong safety posts with section 100x50 (4"x2") at the rail ends protect workers in case of mishaps where the slabs tip away from the frame. In many jurisdictions safety 'A' frames are a requirement of work safe policies and insurance policies when unloading crates containing large slabs. The 'A' frame Includes protective timber on the base rails and rubber cushioning material on the face of the uprights. Steel cross member and fasteners included.

OCTOBER 2021

SAF03	Metric (mm-kg)	Imperial (inch-lb)
Working load limit	6800	5511
Safety posts	100 x 50 x 1400	3.93″ x 1.96″ x 55.11″
Dimensions	1600 x 1600 x 1650	62.99" x 62.99" x 64.96"
Net weight	97	214

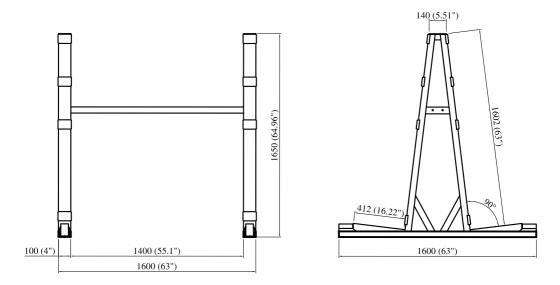

- Heavy duty steel construction.
- Full slab design.
- Sold and used as a set.
- Store slabs on both sides.
- Durable powder coat finish for weather protection.
- Holes in the base rail drain water to reduce corrosion.
- Rubber pads on the face of the vertical frame.
- The middle support bar connects each A-Frame end piece.
- Note: The safety posts are not included.

(1)

Before operation:

- Make sure that the Storage A-Frame is placed on a fat and smooth surface.
- Confirm all the welded joints are free from any defects or damage, such as separation, crack, and so forth.
- Make sure that all the bolts are securely tightened.
- Use appropriate safety equipment to protect against injury.
- If the Storage A-Frame combines with other attachments such as a forklift truck, the user must determine whether the capacity of a crane or other
- hoist fits with the frames's capacity.
- Perform a load test for the frame before transporting/moving/storing the stone.


During operation:


- The materials should be restrained in a proper manner during storage.
- The materials should be evenly loaded on both sides of the Storage A-Frame.
- Make sure the weight of the materials being placed is within the specified working load limit.
- Follow the steps and instructions in this operation manual.

After operation:

- Clean the Storage A-Frame thoroughly after each use.
- Store the frame in a cool and dry place.

- **Step 1:** Check the Storage A-Frame to ensure the frame is tightly and safely before storing the materials.
- **Step 2:** Place the marble and granite slabs on the Storage A-Frame by combining with the Aardwolf Slab Lifter (Standard or Automatic versions) and the Forklift Boom that are attached them with the forklift truck to put each slab slowly on the frame.
- **Note:** The combination between the Aardwolf Slab Lifter and the Forklift Boom to forklift truck must be tightly before moving the slabs to the frame.
- **Step 3:** The slabs should be evenly loaded on both sides of the frame so that it is balanced. The working load is within the specified limit.
- **Step 4:** The operators can use the safety posts from Aardwolf to eliminate any risks of the slab tipping over.

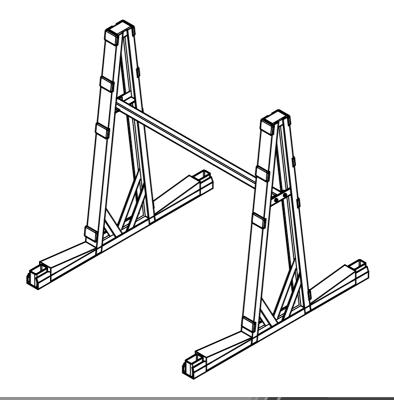

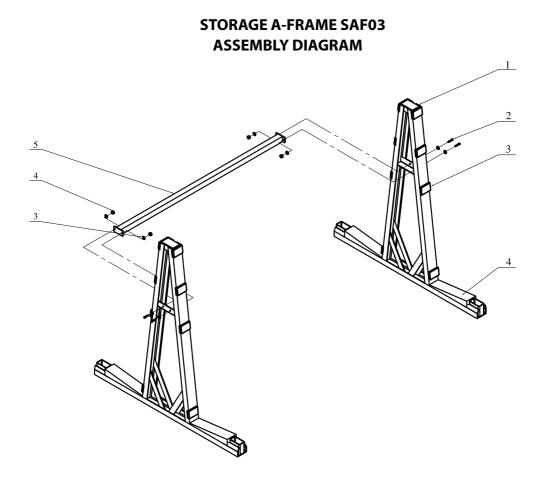

CODE	POSITION	DESCRIPTION	QTY
SAF03 - 001	1	A-Frame Left & Right	02
SAF03 - 002	2	Hexagon Bolt M10x30	04
SAF03 - 003	3	Rubber Pad	16
SAF03 - 004	4	Wooden Gluts	04
SAF03 - 005	5	Washer Ø10	08
SAF03 - 006	6	Hexagon Nut M10	04
SAF03 - 007	7	Cross Bar	01

Please note: When assembling match number on upright with number on base

Updated date: October 15th, 2021

4

- Make a regular procedure for the frame inspection and maintenance.
- The frequency of inspection will depend upon the amount of use of the frame.
- Maintenance should be conducted in a written record, indicating inspection dates, the condition of the frame on each of those dates, and any repairs made.
- Always keep necessary spare parts on hand and use only original spare parts when carrying out repairs or maintenance.
- Nuts and bolts need to be checked and tightened on a regular basis.
- Ensure that the welded joints are free from any defects or damage like separation, cracks, etc.
- Make sure that all the rubber parts are in a sound condition, that they do not cause damage during operation as well as for the materials being loaded.
- Store the frame in a cool and dry place.

WARRANTY

At the time of delivery, it is necessary to check that the Storage A-Frame SAF03 has not been damaged during shipment. Any claims must be presented within eight days from the date of delivery. We grant one year warranty on the Storage A-Frame from the date of purchase (Do not include the rubber layers).

Warranty coverage is not applicable:

- The operator failed to comply with the instructions in the manual.
- The specifications are not followed.
- Damages are due to inadequate maintenance and inspections.
- Damages are due to improper storage and/or usage.
- Repairs were performed by the user without our permission.
- Non-original spare parts were used.









AARDWOLF AMERICA

- 19201 S Reyes Avenue, Unit C7 Compton California, 90221
- (562) 553-6050
- leo@aardwolfusa.com
- www.aardwolfusa.com

INDIA

AARDWOLF NORTH INDIA

- Harmara Road, Industrial area, Madanganj, Kishangarh. District-Ajmer, Rajasthan. / Pin 305801
- Tel: 7300068444 / 8824336757
- sales@aardwolf.co.inWeb: www.aardwolf.co.in

AUSTRALIA

AARDWOLF AUSTRALIA

- 1/5 Stanton Road, Seven Hills NSW 2147
- +02 9838 8427
- enquiries@aardwolfaustralia.com
- 🛇 www.aardwolfaustralia.com

VIETNAM

AARDWOLF VIETNAM

- 1B, An Phu, Thuan An, Binh Duong, Vietnam.
- +84 274 371 2827438/39
- sales@aardwolf.com.au
- 🚱 www.aardwolf.com.au

GERMANY



STONE GLASS EQUIPMENT UG

- Am GutstĶch 11, 8451 Crimmitschau Blankenhain, Germany.
- +49 366 0811 9236
- sales@aardwolf.com.de
- www.aardwolf.com.de



