

ARL1200 (ROCK LIFTER) ASSEMBLY DIAGRAM

POSITION	DESCRIPTION	CODE	QTY.
1	Hook	ARL1200-001	1
2	Base Beam	ARL1200-002	1
3	Top Arm	ARL1200-003	2
4	Double Top Arm	ARL1200-004	1
5	Pin A	ARL1200-005	1
6	Washers Ø26	ARL1200-006	3
7	Nylon Nut M24	T001041	3
8	Nylon Nut M10	T001034	2
9	Washers M10	L006026	2
10	Hexagon Socket Head Bolts M10x45	B015117	2
11	Auto Lock Cover	ARL1200-011	1
12	Auto Lock	ARL1200-012	1
13	Special Nut M14	ARL1200-013	4
14	Hexagon Socket Head Bolts M4x16	B015058	2
15	Head Cover	ARL1200-015	2
16	Pin B	ARL1200-016	1
17	Hexagon Socket Head Bolts M8x30	B015096	4
18	Nylon Nut M24	T001041	1
19	Hexagon Socket Head Bolts M12x55	B015124	4
20	Pipe Thread	ARL1200-020	4
21	Shaft	ARL1200-021	2
22	Pipe A	ARL1200-022	2
23	Pipe B	ARL1200-023	2
24	Double Arm	ARL1200-024	1
25	Pin C	ARL1200-025	1
26	Base Pad	ARL1200-026	2
27	Lock Stop	ARL1200-027	2
28	Single Top Arm	ARL1200-028	1
29	Nylon Nut M8	T001032	4
30	Single Arm	ARL1200-030	1
31	Handle	ARL1200-031	1

