


AARDWOLF GLASS LIFTER 20

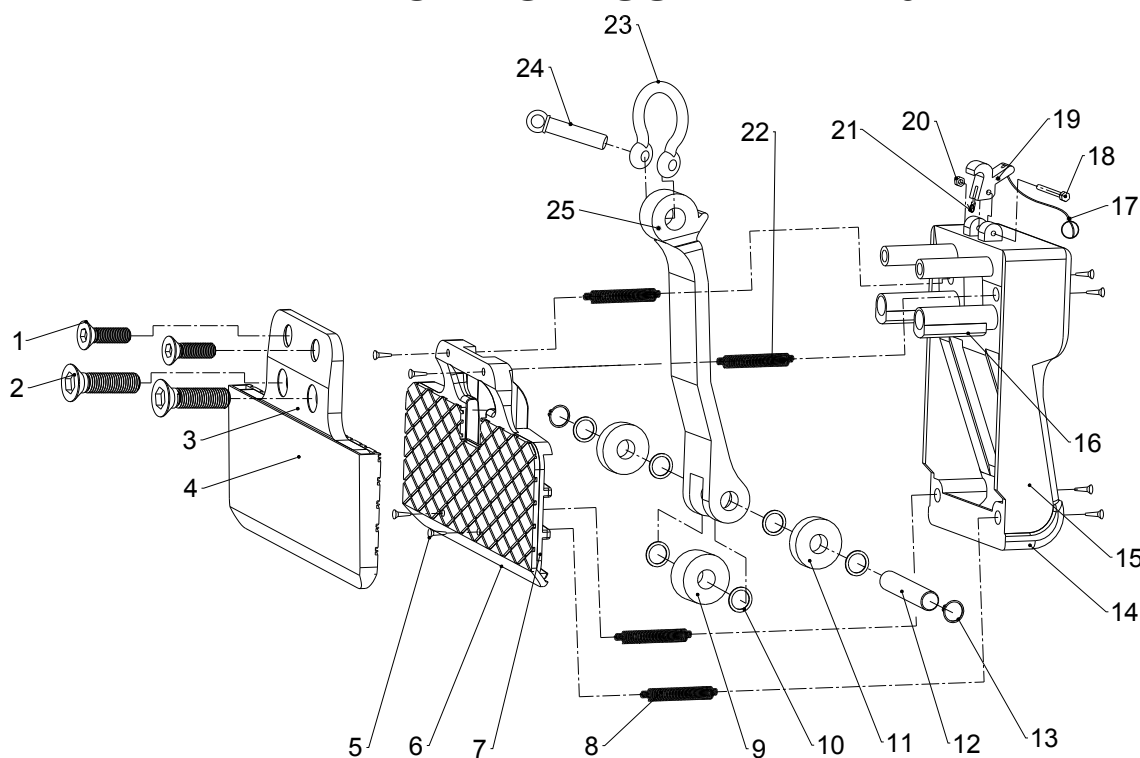

SPARE PARTS LIST

CODE	POSITION	DESCRIPTION	QTY
AGL20 - 01	1	Countersunk head socket screw M12x40	2
AGL20 - 02	2	Countersunk head socket screw M16x50	2
AGL20 - 03	3	Back plate	1
AGL20 - 04	4	Rubber for back plate	1
AGL20 - 05	5	Tapping screws M4x15	8
AGL20 - 06	6	Rubber for center sliding plate	1
AGL20 - 07	7	Center sliding plate	1
AGL20 - 08	8	Bottom extension spring	2
AGL20 - 09	9	Inner pressure wheel	1
AGL20 - 10	10	Brass washer $\phi 20$	6
AGL20 - 11	11	Outer pressure wheel	2
AGL20 - 12	12	Shaft	1
AGL20 - 13	13	Circlips $\phi 20$	2
AGL20 - 14	14	Rubber for camplate	1
AGL20 - 15	15	Camplate	1
AGL20 - 16	16	Rubber pieces	2
AGL20 - 17	17	Lanyard(*)	1
AGL20 - 18	18	Socket head cap screw M5x60	1
AGL20 - 19	19	Locking latch(*)	1
AGL20 - 20	20	Nylon nut M5	1
AGL20 - 21	21	Torsion spring	1
AGL20 - 22	22	Top extention spring	2
AGL20 - 23	23	Bow shackle 3.0T(*)	1
AGL20 - 24	24	Bow shackle pin 3.0T(*)	1
AGL20 - 25	25	Lifting pin	1

(*) Part universal for all Aardwolf Glass lifter models.

When ordering spare parts, please show the codes of parts and quantities on your purchase order.

For example: part code: AGL20- 07, QTY: 11