


RATCHET SEAM SETTER

Model: CTTRSS1

ASSEMBLY DIAGRAM

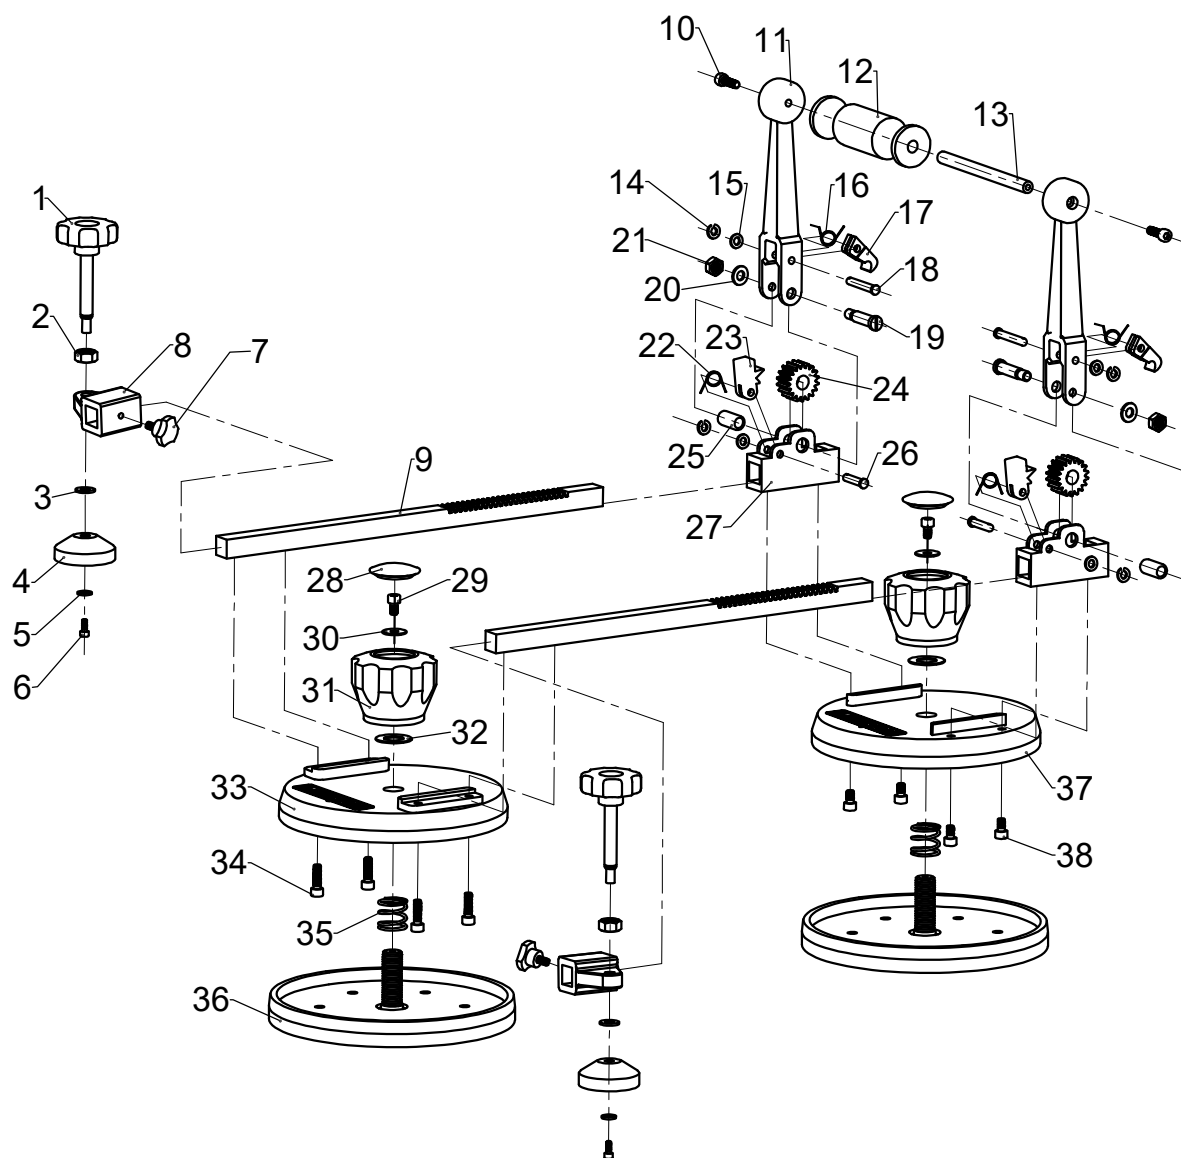

PARTS LIST

CODE	POSITION	DESCRIPTION	Qty.
CTTRSS1-01	01	Hand knob and grip (male thread)M10x55	02
CTTRSS1-02	02	Hex. nut M10	02
CTTRSS1-03	03	Washer Ø 8	02
CTTRSS1-04	04	Stop guide	02
CTTRSS1-05	05	Washer Ø 4	02
CTTRSS1-06	06	Pan head screw M4 x 8	02
CTTRSS1-07	07	Hand knob and grip (male thread)M6 x10	02
CTTRSS1-08	08	Body	02
CTTRSS1-09	09	Gear rack	02
CTTRSS1-10	10	Hex. socket head cap screw M4 x 25	02
CTTRSS1-11	11	Arm	02
CTTRSS1-12	12	Handle-bar	01
CTTRSS1-13	13	Shaft	01
CTTRSS1-14	14	Criclip Ø 6	04
CTTRSS1-15	15	Washer Ø6	04
CTTRSS1-16	16	Torsion spring A	02
CTTRSS1-17	17	Detent A	02
CTTRSS1-18	18	Pin A	02
CTTRSS1-19	19	Pan head shoulder screw M8	02

CODE	POSITION	DESCRIPTION	Qty.
CTTRSS1-20	20	Washer Ø 8	02
CTTRSS1-21	21	Nyloc Nut M8	02
CTTRSS1-22	22	Torsion spring B	02
CTTRSS1-23	23	Detent B	02
CTTRSS1-24	24	Gear	02
CTTRSS1-25	25	Spacing	02
CTTRSS1-26	26	Pin B	02
CTTRSS1-27	27	Frame	02
CTTRSS1-28	28	Hub-cap	02
CTTRSS1-29	29	Hex. socket head cap Screw M6 x 10	02
CTTRSS1-30	30	Washer Ø 6 - Ø 21	02
CTTRSS1-31	31	Hand knob and grip (Female thread)	02
CTTRSS1-32	32	Washer Ø 16	02
CTTRSS1-33	33	Suction cup A	01
CTTRSS1-34	34	Hex. socket head cap Screw M6 x 20	04
CTTRSS1-35	35	Compression spring	02
CTTRSS1-36	36	Rubber	02
CTTRSS1-37	37	Suction cup B	01
CTTRSS1-38	38	Hex. socket head cap Screw M6 x 10	04