

AARDWOLF SLAB LIFTER - AL50B ASSEMBLY DIAGRAM

PARTS LIST

POSITION	DESCRIPTION	CODE	QTY
1	Hexagon socket countersunk head screw M12x40	AL50B-001	02
2	Hexagon socket countersunk head screw M16x50	AL50B-002	02
3	Back plate	AL50B-003	01
5	Screw M4x15	AL50B-005	08
7	Center sliding plate	AL50B-007	01
8	Bottom extension spring	AL50B-008	02
9	Inner pressure wheel	AL50B-009	01
10	Brass washer Ø20	AL50B-010	04
11	Outer pressure wheel	AL50B-011	02
12	Shaft	AL50B-012	01
13	Circlip Ø20	AL50B-013	02
15	Camplate	AL50B-015	01
16	Rubber pieces	AL50B-016	02
17	Lanyard	AL50B-017	01
18	Socket head cap screw M5x60	AL50B-018	01
19	Locking latch	AL50B-019	01
20	Nylon nut M5	AL50B-020	01
21	Torsion spring	AL50B-021	01
22	Top extension spring	AL50B-022	02
23	Shackle	AL50B-023	01
24	Lifting pin	AL50B-024	01
25	Washer Ø5	AL50B-025	02
26	Support Bracket	AL50B-026	01

Support bracket

POSITION	DESCRIPTION	CODE	QTY
1	Handle	AL50B-026.1	01
2	Over center level	AL50B-026.2	01
3	Pin 1	AL50B-026.3	01
4	Cotter pin Ø3	AL50B-026.4	03
5	Chain Ø6x100	AL50B-026.5	01
6	Shackle pin	AL50B-026.6	01
7	Chain Ø6x2000	AL50B-026.7	01
8	Shackle	AL50B-026.8	01
9	Hang Pad	AL50B-026.9	01
10	Pin 2	AL50B-026.10	01
11	Nylon Nut M10	AL50B-026.11	01
12	Washer Ø10	AL50B-026.12	02
13	Support bracket	AL50B-026.13	01
14	Compression spring	AL50B-026.14	01
15	Shaft	AL50B-026.15	01
16	Rubber	AL50B-026.16	01