


ASSEMBLY DIAGRAM

(Mod: AHWT - 910)

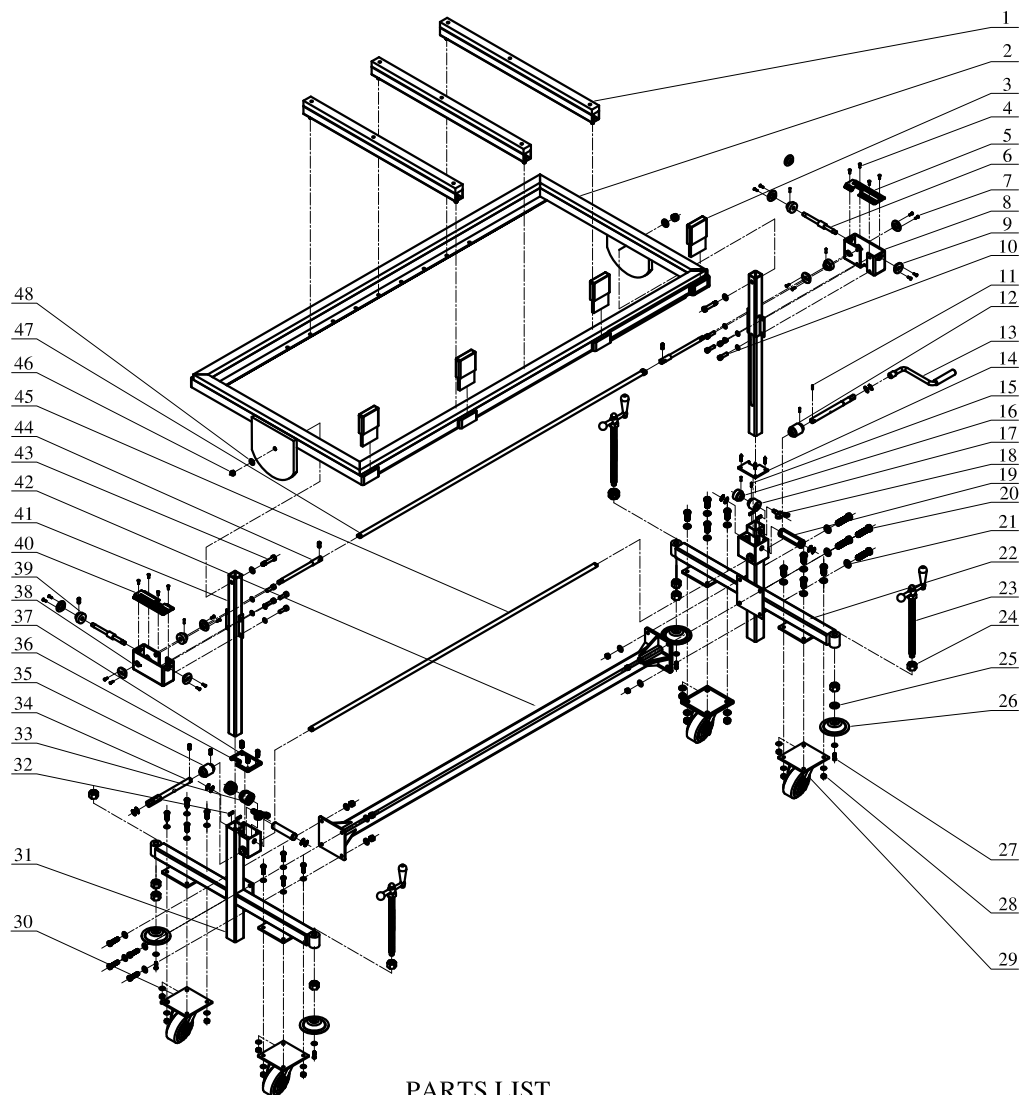

PARTS LIST

CODE	POS.	DESCRIPTION	QTY
AHWT910 - 001	1	Brace Bar	03
AHWT910 - 002	2	Table	01
AHWT910 - 003	3	Back-Up Head	04
AHWT910 - 004	4	Tapping Screw M4x15	08
AHWT910 - 005	5	Right Tilt Gearbox Cover	01
AHWT910 - 006	6	Worm Gear	02
AHWT910 - 007	7	Hexagon Socket Countersunk Head Screw M4x15	16
AHWT910 - 008	8	Right Tilt Gear Box	01
AHWT910 - 009	9	Brass Bush	08
AHWT910 - 010	10	Hexagon Socket Head Cap Screw M10x20	08
AHWT910 - 011	11	Grooved Pin	04
AHWT910 - 012	12	Right Worm	01
AHWT910 - 013	13	Adjustable Crank	01
AHWT910 - 014	14	Right Gearbox Cover	01
AHWT910 - 015	15	Hexagon Socket Set Screw M6	06
AHWT910 - 016	16	Gear	02
AHWT910 - 017	17	Right Worm Gear	01
AHWT910 - 018	18	Wing Bolt M8	02
AHWT910 - 019	19	Shaft	02
AHWT910 - 020	20	Hexagon Bolt M10x30	24
AHWT910 - 021	21	Washer Ø10	48
AHWT910 - 022	22	Right Post	01
AHWT910 - 023	23	Leveling Post	04
AHWT910 - 024	24	Hexagon Nut M20	08

CODE	POS.	DESCRIPTION	QTY
AHWT910 - 025	25	Washer Ø18	04
AHWT910 - 026	26	Adjustable Padded Foot	04
AHWT910 - 027	27	Hexagon Bolt M10x20	04
AHWT910 - 028	28	Hexagon Nut M10	24
AHWT910 - 029	29	Swivel Castor	02
AHWT910 - 030	30	Swivel Castor (Locking Type)	02
AHWT910 - 031	31	Left Post	01
AHWT910 - 032	32	Adjustable Gib	04
AHWT910 - 033	33	Left Gear	01
AHWT910 - 034	34	Rotation Axis	02
AHWT910 - 035	35	Left Worm Gear	01
AHWT910 - 036	36	Left Gearbox Cover	01
AHWT910 - 037	37	Tapping Screw	06
AHWT910 - 038	38	Left Tilt Gear Box	01
AHWT910 - 039	39	Hypoid Gear	04
AHWT910 - 040	40	Left Tilt Gearbox Cover	01
AHWT910 - 041	41	Slide Bar	02
AHWT910 - 042	42	Cross Bar	01
AHWT910 - 043	43	Hexagon Bolt M12x80	02
AHWT910 - 044	44	Tilt Axis	02
AHWT910 - 045	45	Rotate Connection Bar	01
AHWT910 - 046	46	Washer Ø12	04
AHWT910 - 047	47	Tilt Connection Bar	01
AHWT910 - 048	48	Hexagon Nut M12	02

Please note: When assembling match number on upright with number on base