


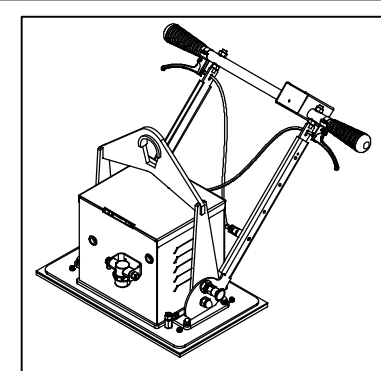

# ASSEMBLY DIAGRAM ELECTRIC VACUUM LIFTER (Code: AEVL1 250)



| PARTS LIST |             |                    |      |
|------------|-------------|--------------------|------|
| No.        | Code        | Name Part          | Qty. |
| 1          | AEVL1 - 001 | TOP PLATE          | 01   |
| 2          | AEVL1 - 002 | SIDE PLATE         | 01   |
| 3          | AEVL1 - 003 | SIDE PLATE         | 01   |
| 4          | AEVL1 - 004 | BUSHING            | 02   |
| 5          | AEVL1 - 005 | PIN                | 02   |
| 6          | AEVL1 - 006 | UNDER PLATE        | 01   |
| 7          | AEVL1 - 007 | FITTING            | 01   |
| 8          | AEVL1 - 008 | PLATE              | 01   |
| 9          | AEVL1 - 009 | RUBBER             | 01   |
| 10         | AEVL1 - 010 | PLATE              | 01   |
| 11         | AEVL1 - 011 | BORDER             | 01   |
| 12         | AEVL1 - 012 | BLOCK              | 02   |
| 13         | AEVL1 - 013 | VACUUM TANK        | 01   |
| 14         | AEVL1 - 014 | VACUUM TANK        | 01   |
| 15         | AEVL1 - 015 | VACUUM TANK        | 02   |
| 16         | AEVL1 - 016 | PAD MOTOR          | 02   |
| 17         | AEVL1 - 017 | CONNECTING         | 02   |
| 18         | AEVL1 - 018 | CONNECTING         | 02   |
| 19         | AEVL1 - 019 | BLOCK              | 01   |
| 20         | AEVL1 - 020 | CONNECTING         | 01   |
| 21         | AEVL1 - 021 | COVER              | 01   |
| 22         | AEVL1 - 022 | COVER              | 01   |
| 23         | AEVL1 - 023 | COVER              | 01   |
| 24         | AEVL1 - 024 | BRACKET ALAM       | 01   |
| 25         | AEVL1 - 025 | BRACKET FILTER     | 01   |
| 26         | AEVL1 - 026 | OUTSIDE PLATE      | 01   |
| 27         | AEVL1 - 027 | OUTSIDE PLATE LOCK | 01   |
| 28         | AEVL1 - 028 | INSIDE PLATE       | 02   |
| 29         | AEVL1 - 029 | NUT                | 01   |
| 30         | AEVL1 - 030 | PIPE               | 01   |
| 31         | AEVL1 - 031 | PIPE               | 01   |
| 32         | AEVL1 - 032 | THREAD PIN         | 02   |
| 33         | AEVL1 - 033 | BAR                | 02   |
| 34         | AEVL1 - 034 | PIN                | 02   |
| 35         | AEVL1 - 035 | LOCATING           | 02   |
| 36         | AEVL1 - 036 | BOLT               | 02   |
| 37         | AEVL1 - 037 | CONTROL            | 01   |
| 38         | AEVL1 - 038 | CLOCKING           | 02   |
| 39         | AEVL1 - 039 | FIX WORK           | 01   |
| 40         | AEVL1 - 040 | THREAD CONNECTING  | 01   |
| 41         | AEVL1 - 041 | BOLT COME M6       | 06   |
| 42         | AEVL1 - 042 | NUT M8             | 04   |

| PARTS LIST |             |                        |      |
|------------|-------------|------------------------|------|
| No.        | Code        | Name Part              | Qty. |
| 43         | AEVL1 - 043 | BOLT M8                | 04   |
| 44         | AEVL1 - 044 | NUT M6                 | 06   |
| 45         | AEVL1 - 045 | NUT M14                | 02   |
| 46         | AEVL1 - 046 | O-RING SEAL            | 06   |
| 47         | AEVL1 - 047 | WASH FLAT M8           | 04   |
| 48         | AEVL1 - 048 | WASH M6                | 10   |
| 49         | AEVL1 - 049 | WASH M8                | 04   |
| 50         | AEVL1 - 050 | WASH M14               | 02   |
| 51         | AEVL1 - 051 | NUT M12                | 04   |
| 52         | AEVL1 - 052 | FILTER                 | 01   |
| 53         | AEVL1 - 053 | CONNECTING 1/4 & 1/8   | 01   |
| 54         | AEVL1 - 054 | VACUUM SENSOR          | 02   |
| 55         | AEVL1 - 055 | CONNECTING 1/4         | 01   |
| 56         | AEVL1 - 056 | ALAM BOX               | 01   |
| 57         | AEVL1 - 057 | CONNECTING 1/8 PIPE 6  | 01   |
| 58         | AEVL1 - 058 | CONNECTING 1/4 PIPE 10 | 01   |
| 59         | AEVL1 - 059 | CONNECTING 3/8 PIPE 10 | 05   |
| 60         | AEVL1 - 060 | CONNECTING 3/8 PIPE 10 | 02   |
| 61         | AEVL1 - 061 | CONNECTING 1/4 PIPE 6  | 01   |
| 62         | AEVL1 - 062 | CONNECTING Y PIPE 6    | 01   |
| 63         | AEVL1 - 063 | PIPE HANDBRAKE LEVER   | 02   |
| 64         | AEVL1 - 064 | ONE -WAY VALVE 1/4     | 01   |
| 65         | AEVL1 - 065 | RELAY                  | 02   |
| 66         | AEVL1 - 066 | POWER                  | 01   |
| 67         | AEVL1 - 067 | ROAM                   | 02   |
| 68         | AEVL1 - 068 | VACUUM PUMP            | 01   |
| 69         | AEVL1 - 069 | SPRING                 | 02   |
| 70         | AEVL1 - 070 | VACUUM GAUGE           | 01   |
| 71         | AEVL1 - 071 | VALVE 3-2              | 01   |
| 72         | AEVL1 - 072 | BUTTOM GREEN           | 02   |
| 73         | AEVL1 - 073 | BUTTOM RED             | 01   |
| 74         | AEVL1 - 074 | LIGHT GREEN            | 01   |
| 75         | AEVL1 - 075 | LIGHT RED              | 01   |
| 76         | AEVL1 - 076 | HAND HOLD              | 02   |
| 77         | AEVL1 - 077 | HANDBRAKE LEVER        | 02   |
| 78         | AEVL1 - 078 | BOLT M6                | 06   |

