


ASSEMBLY DIAGRAM
ELECTRIC VACUUM LIFTER
(Code: AEVLP4 - 500)

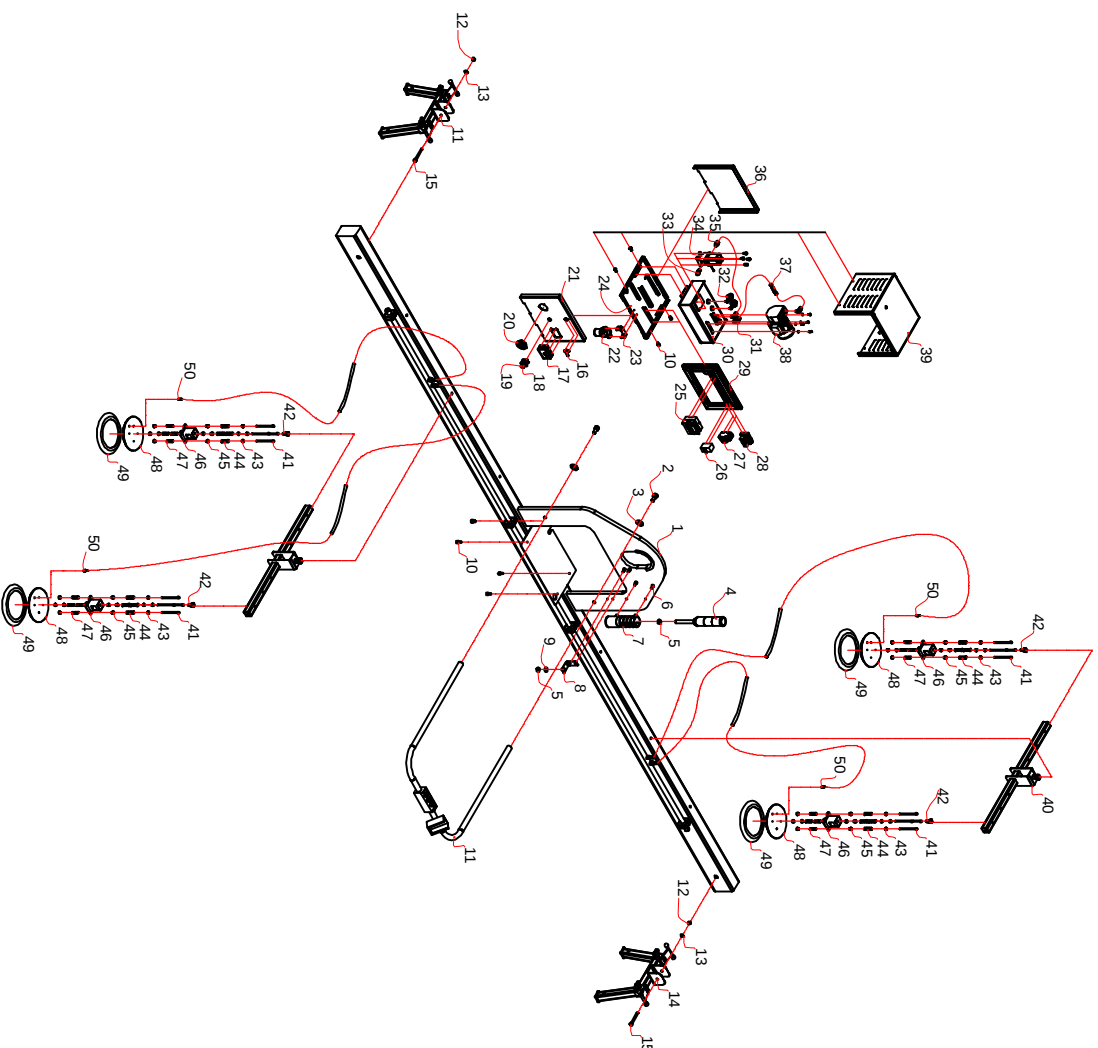

PARTS LIST			
No.	Code	Part Number	Qty.
01	AEVLP4-001	Main Frame	01
02	AEVLP4-002	Bot M10 x 30	02
03	AEVLP4-003	Washer M10	02
04	AEVLP4-004	Alarm light	01
05	AEVLP4-005	Nut M18	02
06	AEVLP4-006	Bot M8	04
07	AEVLP4-007	Light holder	01
08	AEVLP4-008	Light pad	01
09	AEVLP4-009	Washer M18	01
10	AEVLP4-010	Bot M6	12
11	AEVLP4-011	Handle	01
12	AEVLP4-012	Nut M20	02
13	AEVLP4-013	Washer M20	02
14	AEVLP4-014	Packing	02
15	AEVLP4-015	Bot M20	02
16	AEVLP4-016	Locking Handle	01
17	AEVLP4-017	Alarm Box	01
18	AEVLP4-018	Power Switch	01
19	AEVLP4-019	Power Light	01
20	AEVLP4-020	Vacuum Gauge	01
21	AEVLP4-021	Filter	01
22	AEVLP4-022	Filter pad	01
23	AEVLP4-023	Bottom Box	01
24	AEVLP4-024	Control Box	01
25	AEVLP4-025	Control Box	01

PARTS LIST			
No.	Code	Part Number	Qty.
26	AEVLP4-026	CB - 22A	01
27	AEVLP4-027	Contactor	01
28	AEVLP4-028	Relay	01
29	AEVLP4-029	Electric Board	01
30	AEVLP4-030	Vacuum Tank	01
31	AEVLP4-031	Elbow Connection $\frac{1}{2}$ - $\phi 12$	03
32	AEVLP4-032	Pressure Sensor	02
33	AEVLP4-033	Connection $1\frac{1}{2}$ - $\phi 27$ + $\frac{1}{4}$ - $\phi 6$	01
34	AEVLP4-034	Solenoid	01
35	AEVLP4-035	Elbow connection $\frac{1}{2}$ - $\phi 12$	01
36	AEVLP4-036	Back Box	01
37	AEVLP4-037	One Way Valve	01
38	AEVLP4-038	Motor VRT - 408 - 1	01
39	AEVLP4-039	Top Box	01
40	AEVLP4-040	Beam 50 x 50 x 5	02
41	AEVLP4-041	Bot M12 x 230	16
42	AEVLP4-042	Latch locking M20	06
43	AEVLP4-043	Bushing $\phi 28$	32
44	AEVLP4-044	Spring $\phi 3 \times 80$	16
45	AEVLP4-045	Bushing $\phi 26$	32
46	AEVLP4-046	Bracket suction pad	04
47	AEVLP4-047	Spring $\phi 1.8 \times 126$	16
48	AEVLP4-048	Hud 300	04
49	AEVLP4-049	Seal 300	04
50	AEVLP4-050	Tailpiece male 3/6	11

