



MECHANICAL VACUUM LIFTER

Code AMVL600-4

ASSEMBLY DIAGRAM

PARTS LIST

No.	Code	Name Part	Qty.
1	AMVL600 - 001	Bow shackle	01
2	AMVL600 - 002	Main spindle	01
3	AMVL600 - 003	Actuator	01
4	AMVL600 - 004	Eye bolt M8	02
5	AMVL600 - 005	Valve locking	01
6	AMVL600 - 006	O-ring 40 x 47 x 3.5	01
7	AMVL600 - 007	Bolt G3/4	01
8	AMVL600 - 008	O-ring 50 x 60 x 5	01
9	AMVL600 - 009	Bolt M6 x 20	46
10	AMVL600 - 010	Top housing	01
11	AMVL600 - 011	Piston diaphragma	01
12	AMVL600 - 012	Piston small	01
13	AMVL600 - 013	Piston ring	01
14	AMVL600 - 014	Bolt M10 x 65	08
15	AMVL600 - 015	Lift stop	01
16	AMVL600 - 016	Bottom piston	01
17	AMVL600 - 017	Housing	01
18	AMVL600 - 018	Washer M10	16
19	AMVL600 - 019	Bolt M10 x 35	06
20	AMVL600 - 020	Box cover	01
21	AMVL600 - 021	Bolt M3 x 12	04
22	AMVL600 - 022	Nut M10	08
23	AMVL600 - 023	Filter pad	01

PARTS LIST

No.	Code	Name Part	Qty.
24	AMVL600 - 024	Filter 3/4	01
25	AMVL600 - 025	Main bar 1300	01
26	AMVL600 - 026	Air hose ϕ 13	08
27	AMVL600 - 027	Tee connection 1/4	01
28	AMVL600 - 028	Connection 1/4 x 2	01
29	AMVL600 - 029	Latch locking	04
30	AMVL600 - 030	Suction bracket	04
31	AMVL600 - 031	Bolt M12 x 160	16
32	AMVL600 - 032	Top bushing	32
33	AMVL600 - 033	Spring 2.5 x 60	16
34	AMVL600 - 034	Middle bushing	16
35	AMVL600 - 035	Spring 1.5 x 60	16
36	AMVL600 - 036	Bottom bushing	32
37	AMVL600 - 037	Hub 300	04
38	AMVL600 - 038	Seal 300	04
39	AMVL600 - 039	Connection 1/4	04
40	AMVL600 - 040	Parking	02
41	AMVL600 - 041	Beam 40 x 40 x 3	02
42	AMVL600 - 042	Latch locking M6	04
43	AMVL600 - 043	Beam bracket	02
44	AMVL600 - 044	U bolt M10	04
45	AMVL600 - 045	Support plate	02
46	AMVL600 - 046	Handle assembly	01