



MECHANICAL VACUUM LIFTER

Code AMVL600-8

ASSEMBLY DIAGRAM

PARTS LIST			
No.	Code	Name Part	Qty.
1	AMVL600 - 001	Bow shackle	01
2	AMVL600 - 002	Main spindle	01
3	AMVL600 - 003	Actuator	01
4	AMVL600 - 004	Eye bolt M8	02
5	AMVL600 - 005	Valve locking	01
6	AMVL600 - 006	O-ring 40 x 47 x 3.5	01
7	AMVL600 - 007	Bolt G3/4	01
8	AMVL600 - 008	O-ring 50 x 60 x 5	01
9	AMVL600 - 009	Bolt M6 x 20	42
10	AMVL600 - 010	Top housing	01
11	AMVL600 - 011	Piston diaphragma	01
12	AMVL600 - 012	Piston small	01
13	AMVL600 - 013	Piston ring	01
14	AMVL600 - 014	Bolt M10 x 65	08
15	AMVL600 - 015	Lift stop	01
16	AMVL600 - 016	Bottom piston	01
17	AMVL600 - 017	Housing	01
18	AMVL600 - 018	Washer M10	16
19	AMVL600 - 019	Bolt M10 x 35	06
20	AMVL600 - 020	Box cover	01
21	AMVL600 - 021	Bolt M3 x 12	04
22	AMVL600 - 022	Nut M10	08
23	AMVL600 - 023	Filter pad	02
24	AMVL600 - 024	Filter	02
25	AMVL600 - 025	Main bar 2200	01
26	AMVL600 - 026	Connection 1/4 x 3	02
27	AMVL600 - 027	Tee connection 1/4	02
28	AMVL600 - 028	Air hose Ø10	12
29	AMVL600 - 029	Connection 1/4	12
30	AMVL600 - 030	Suction pad SF200	08
31	AMVL600 - 031	Horizontal bar	04
32	AMVL600 - 032	Latch locking M8	16
33	AMVL600 - 033	Parking	02
34	AMVL600 - 034	U bolt M10	04
35	AMVL600 - 035	Support plate	02
36	AMVL600 - 036	Handle assembly	01
34	AMVL600 - 034	Pin Ø10	02
35	AMVL600 - 035	Bracket support bar	02
36	AMVL600 - 036	Support bar	02