


AVGLP4MR-250 - AIR VACUUM GLASS LIFTER

ASSEMBLY DIAGRAM

PARTS LIST

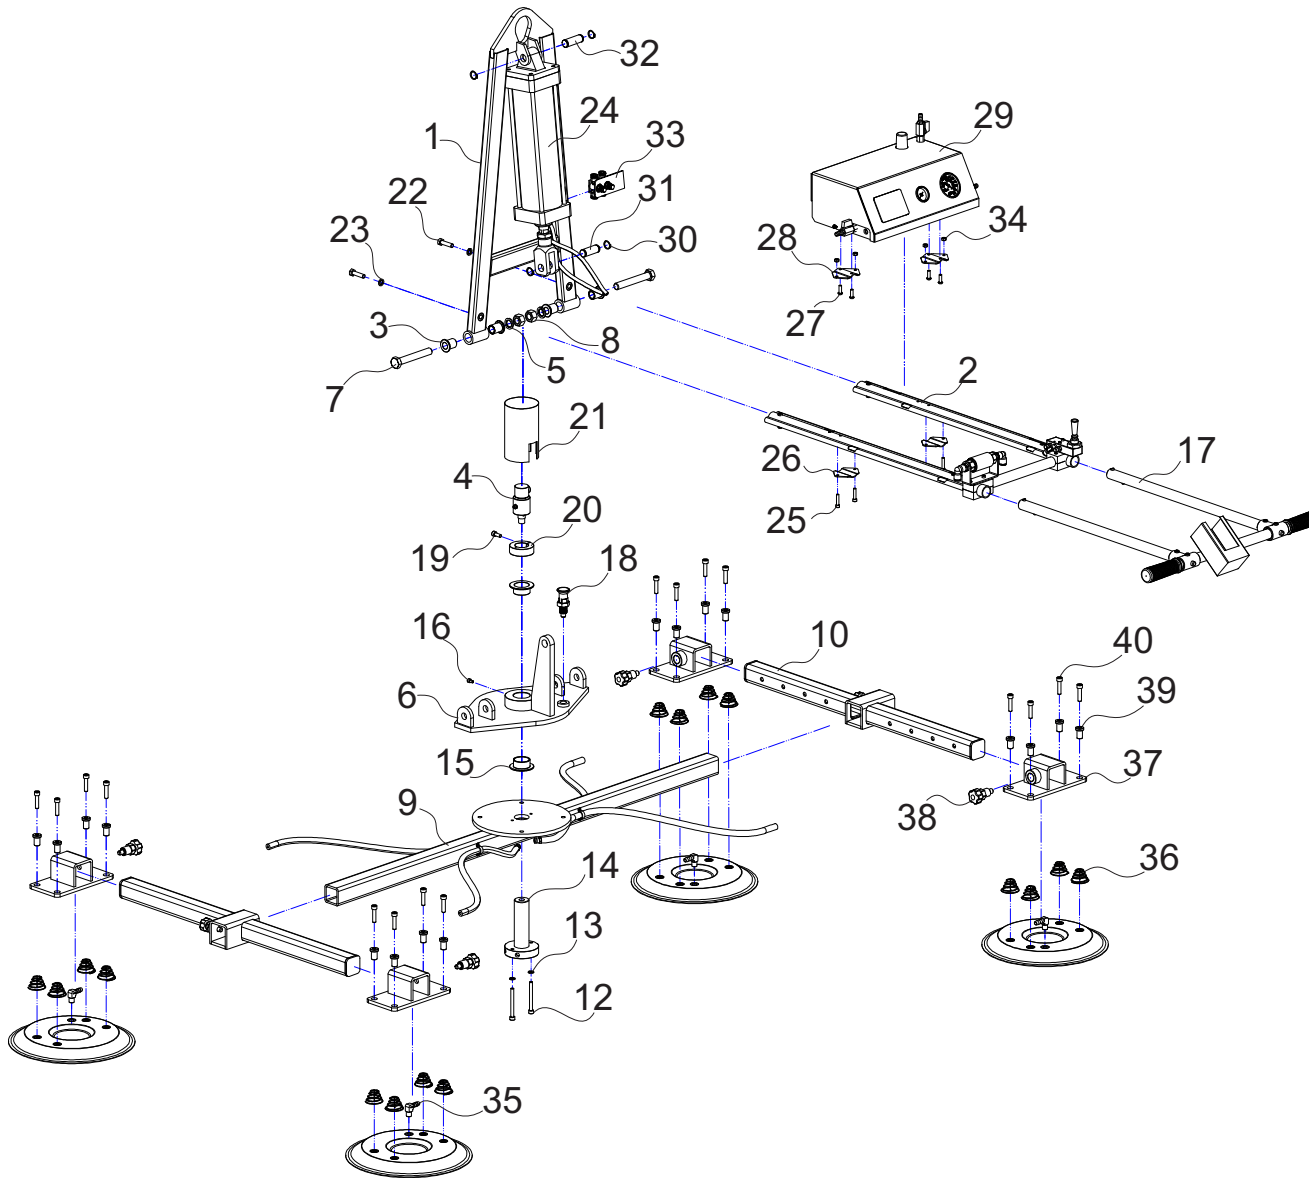

POSITION	DESCRIPTION	QTY.	CODE
1	HANGING FRAME	01	AVGLP4MR-250 - 01
2	HANDLE	01	AVGLP4MR-250 - 02
3	HORIZONTAL PLAIN BEARING	04	AVGLP4MR-250 - 03
4	COUPLING JOINT 3/8	01	AVGLP4MR-250 - 04
5	SPRING WASHER	02	AVGLP4MR-250 - 05
6	BEARING SUPPORT	01	AVGLP4MR-250 - 06
7	BOLT M18x120	02	AVGLP4MR-250 - 07
8	NUT M18	02	AVGLP4MR-250 - 08
9	HORIZONTAL HANGING BAR	01	AVGLP4MR-250 - 09
10	PAD HANGING BAR	02	AVGLP4MR-250 - 10
11	SUCTION CUP 300	04	AVGLP4MR-250 - 11
12	BOLT M8x80	02	AVGLP4MR-250 - 12
13	SPRING WASHER M8	02	AVGLP4MR-250 - 13
14	SHAFT	01	AVGLP4MR-250 - 14
15	PLAIN BEARING	02	AVGLP4MR-250 - 15
16	BOLT M6x10	01	AVGLP4MR-250 - 16
17	SLIDE HANDLE	01	AVGLP4MR-250 - 17
18	SPRING PIN	01	AVGLP4MR-250 - 18
19	BOLT M8x20	01	AVGLP4MR-250 - 19
20	BLOCKING NUT	01	AVGLP4MR-250 - 20
21	COVER	01	AVGLP4MR-250 - 21
22	BOLT M10x40	02	AVGLP4MR-250 - 22
23	SPRING WASHER M10	02	AVGLP4MR-250 - 23
24	AIR CYLINDER 100x400	01	AVGLP4MR-250 - 24
25	HEXAGON SOCKET HEAD M6x35	04	AVGLP4MR-250 - 25
26	KEEPER PLATE	02	AVGLP4MR-250 - 26
27	HEXAGON SOCKET BUTTON HEAD M6x20	04	AVGLP4MR-250 - 27
28	BOX CONNECTOR	02	AVGLP4MR-250 - 28
29	AIR BOX	01	AVGLP4MR-250 - 29
30	EXTERNAL CIRCLIPS	04	AVGLP4MR-250 - 30
31	BOTTOM SHAFT	01	AVGLP4MR-250 - 31
32	TOP SHAFT	01	AVGLP4MR-250 - 32
33	AIR ADJUSTMENT DEVICE	01	AVGLP4MR-250 - 33
34	NUT M6	04	AVGLP4MR-250 - 34
35	TAILPIECE FEMALE 3/8	04	AVGLP4MR-250 - 35
36	SPRING	16	AVGLP4MR-250 - 36
37	BRACKET	04	AVGLP4MR-250 - 37
38	LOCKING PIN	04	AVGLP4MR-250 - 38
39	BUSHING	16	AVGLP4MR-250 - 39
40	HEXAGON SOCKET HEAD CAP SCREW M8x35	16	AVGLP4MR-250 - 40