




BATTERY JOINT SETTER

Model BOSS

ASSEMBLY DIAGRAM

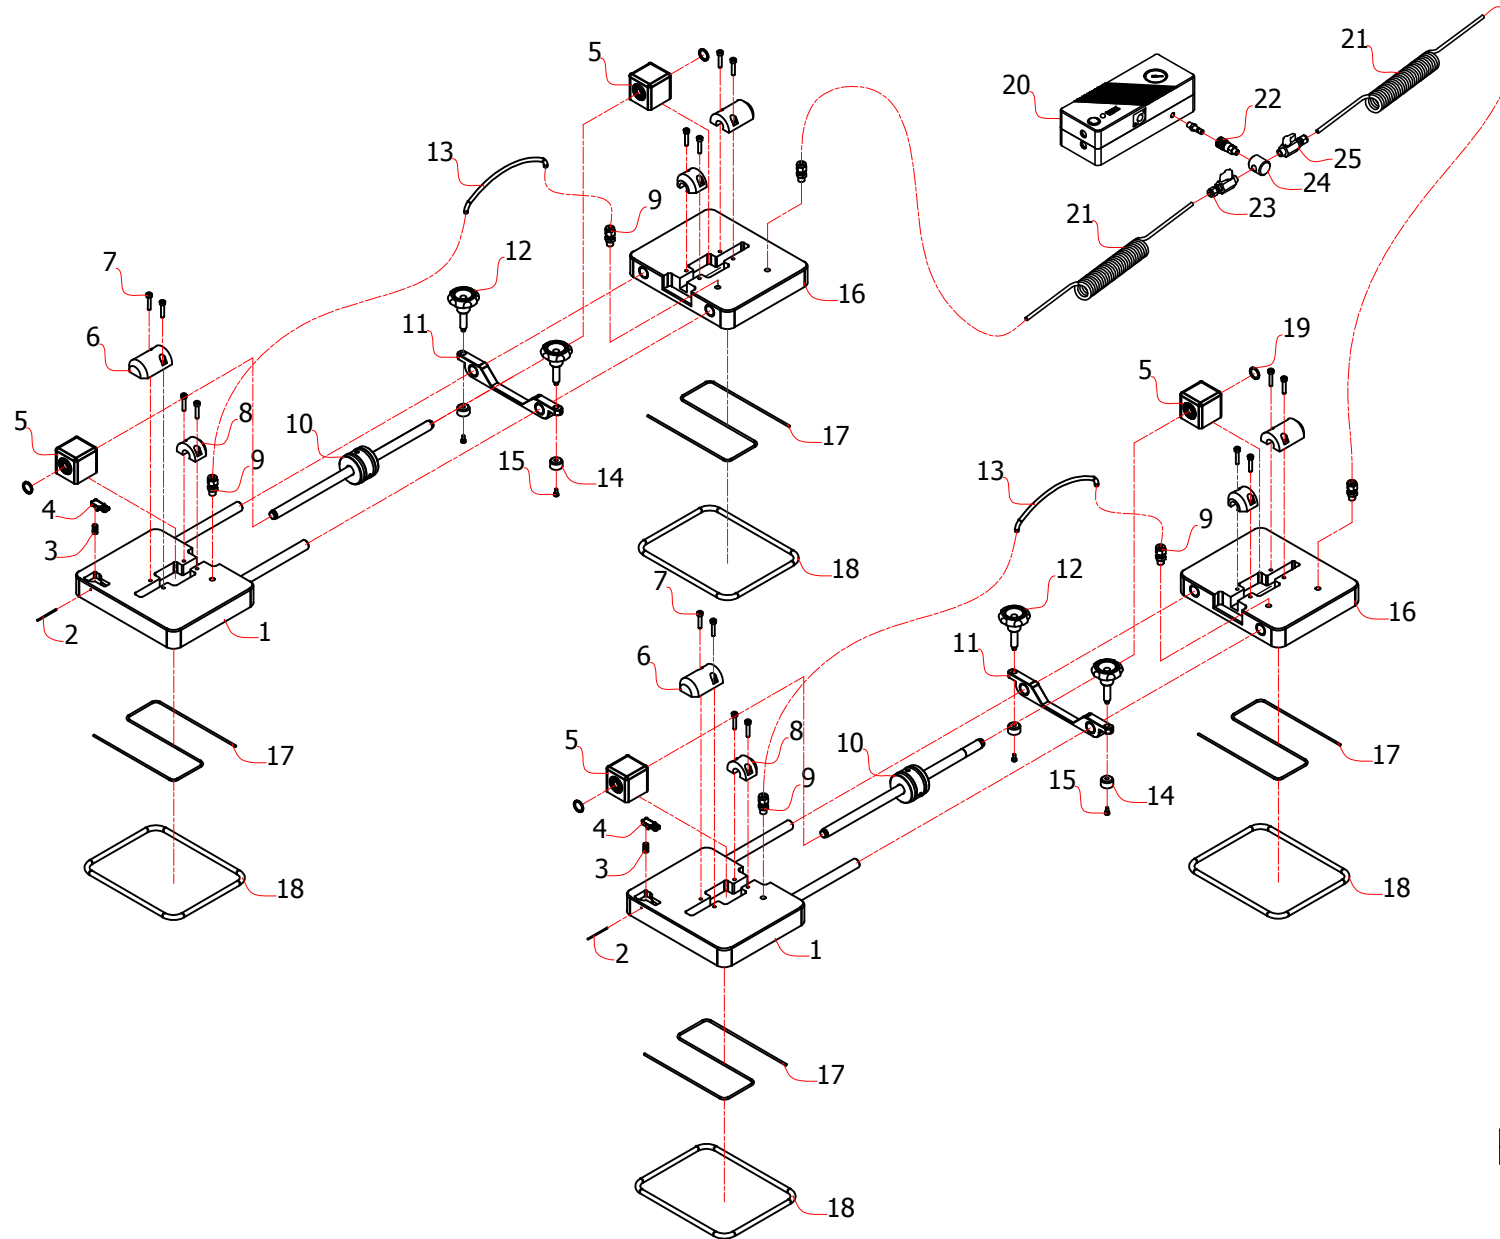

PARTS LIST

No.	Code	Part Number	Qty.
01	BOSS - 001	Plate with exhaust valve	02
02	BOSS - 002	Pin $\phi 2 \times 43$	02
03	BOSS - 003	Spring	02
04	BOSS - 004	Exhaust valve	02
05	BOSS - 005	Bearing holder	04
06	BOSS - 006	Long pad	04
07	BOSS - 007	Bolt M5 x 25	16
08	BOSS - 008	Short pad	04
09	BOSS - 009	Quick connector $\phi 6-1/8''$	06
10	BOSS - 010	Main axle	02
11	BOSS - 011	Horizontal pad	02
12	BOSS - 012	Level adjust pad	04
13	BOSS - 013	Hose $\phi 6$	02
14	BOSS - 014	Plastic piece	04
15	BOSS - 015	Bolt M4x 8	04
16	BOSS - 016	Plate connect vacuum	02
17	BOSS - 017	Seal $\phi 2.5$	04
18	BOSS - 018	Sponge rubber seal foam	04
19	BOSS - 019	Circlip $\phi 15$	04
20	BOSS - 020	Battery vacuum box	01
21	BOSS - 021	Spiral Hose $\phi 6$	02
22	BOSS - 022	Quick Coupling $1/8''$	01
23	BOSS - 023	Quick connector $\phi 6-1/4''$	02
24	BOSS - 024	Ball Valve $1/4''$	02
25	BOSS - 025	divide $1/8''-1/8''-1/4''$	01

