


ASSEMBLY DIAGRAM (Mod: FAF - 1800)

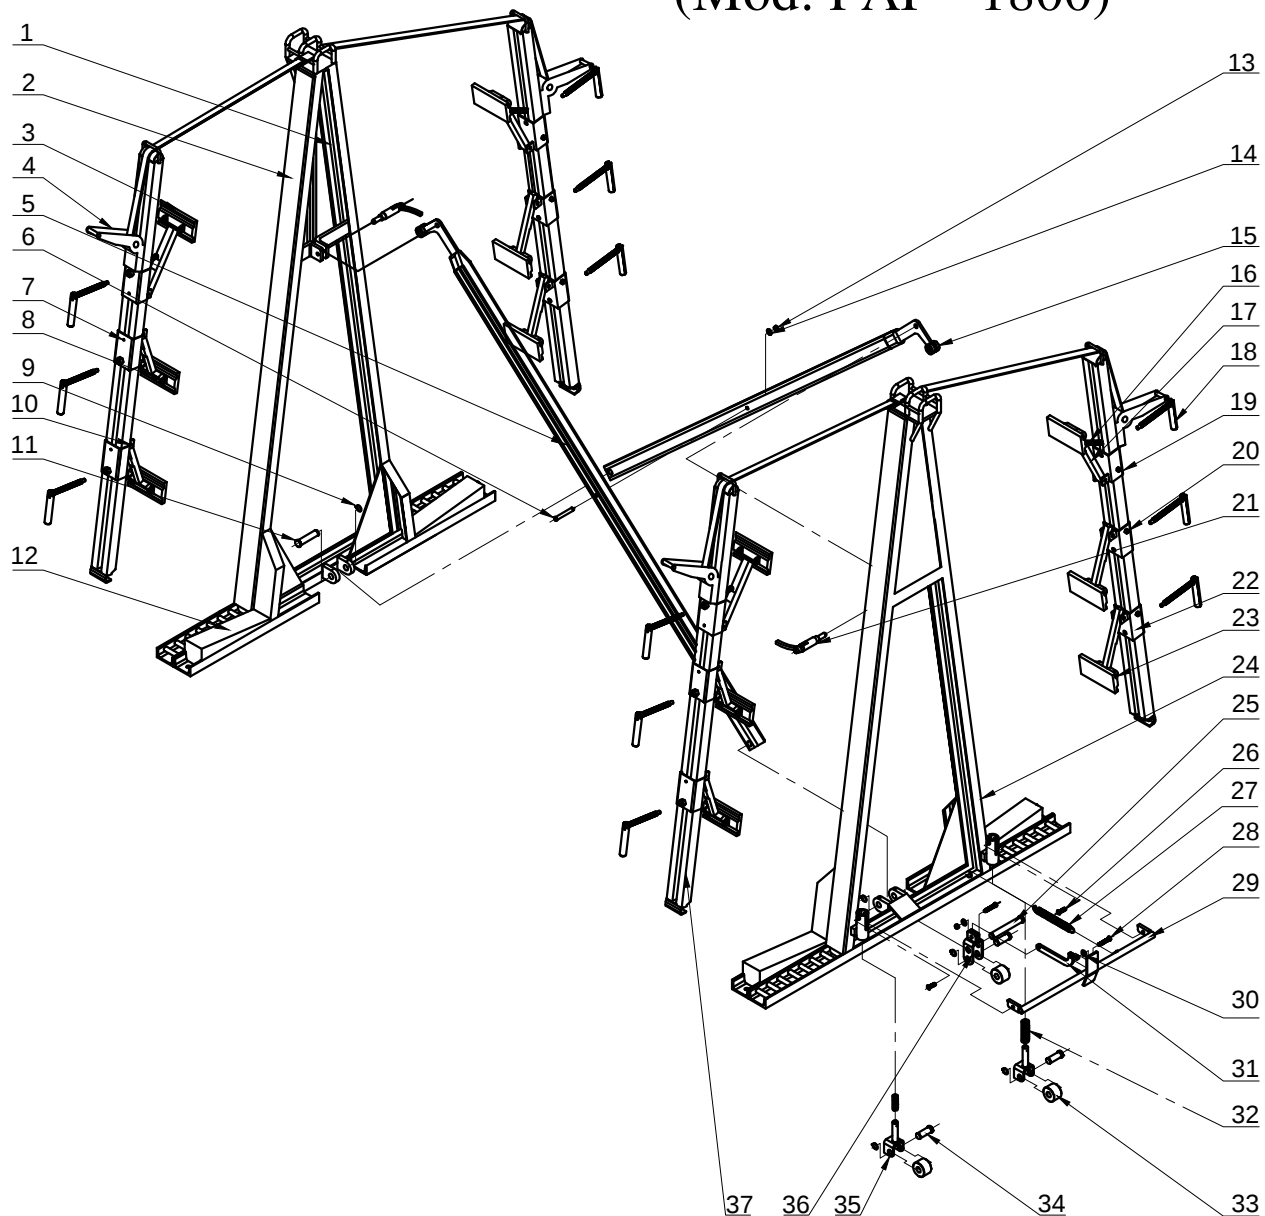

PARTS LIST

CODE	POSITION	DESCRIPTION	QTY
FAF1800- 001	1	Left Body	01
FAF1800 - 002	2	Woods	04
FAF1800 - 003	3	Jaw + Rubber	08
FAF1800 - 004	4	Stap Ratchet	04
FAF1800 - 005	5	Cross Bar	02
FAF1800 - 006	6	Pin Ø12	01
FAF1800 - 007	7	Hexagon Bolt M6x20	08
FAF1800 - 008	8	Pin Ø12	08
FAF1800 - 009	9	Circlip Ø20	05
FAF1800 - 010	10	Hexagon Bolt + Nut M10x40	08
FAF1800 - 011	11	Pin Ø20	01
FAF1800 - 012	12	Wooden Gluts	04
FAF1800 - 013	13	Hexagon Nut M12	01
FAF1800 - 014	14	Washer Ø12	17
FAF1800 - 015	15	Slide Bearing	04
FAF1800 - 016	16	Springs	04
FAF1800 - 017	17	Arm	08
FAF1800 - 018	18	Locking Handle	08
FAF1800 - 019	19	Upper Slide	04

CODE	POSITION	DESCRIPTION	QTY
FAF1800 - 020	20	Wing Bolt M8x30	08
FAF1800 - 021	21	Load Locking Pin	02
FAF1800 - 022	22	Lower Slide	04
FAF1800 - 023	23	Circlips Ø12	16
FAF1800 - 024	24	Right Body	01
FAF1800 - 025	25	Pin Ø20	01
FAF1800 - 026	26	Countersink Screw M10	02
FAF1800 - 027	27	Extension Spring	01
FAF1800 - 028	28	Hexagon Bolt + Nut M10	02
FAF1800 - 029	29	Cam Lever	01
FAF1800 - 030	30	Washer Ø10	02
FAF1800 - 031	31	Push Lever	01
FAF1800 - 032	32	Compression Spring	02
FAF1800 - 033	33	Pressure Wheel	03
FAF1800 - 034	34	Pin	03
FAF1800 - 035	35	Base Wheel	01
FAF1800 - 036	36	Inner Base Wheel	01
FAF1800 - 037	37	Securing Bar	04

When ordering, please give number of spare - part (code number) plus type of Folding A Frame.

For example: FAF1800-008 , QTY 10

FAF1800-018 , QTY 02