



ASSEMBLY DIAGRAM

ROUND BAR LIFTER 305 (RBL305)

PARTS LIST

CODE	POSITION	DESCRIPTION	QTY
RBL305 - 001	1	Main	01
RBL305 - 002	2	Nut M14	04
RBL305 - 003	3	Washer M14	04
RBL305 - 004	4	Washer M14	04
RBL305 - 005	5	Bushing Ø22	04
RBL305 - 006	6	Bolt M14x60	04
RBL305 - 007	7	Lift Stop	04
RBL305 - 008	8	Washer M8	02
RBL305 - 009	9	Bolt M8x20	02
RBL305 - 010	10	Nut M12	04
RBL305 - 011	11	Washer M12	04
RBL305 - 012	12	Washer M12	04
RBL305 - 013	13	Pin Ø14x170	01
RBL305 - 014	14	Bushing Ø21x90	01
RBL305 - 015	15	Locking Base	01
RBL305 - 016	16	Socket Countersink Screw M8	02
RBL305 - 017	17	Locking Latch	01
RBL305 - 018	18	Socket Head Cap Screw M8	04
RBL305 - 019	19	Nut M8	02
RBL305 - 020	20	Washer M8	02
RBL305 - 021	21	Pin Ø10x176	01
RBL305 - 022	22	Bushing Ø16x126	01
RBL305 - 023	23	Clamp	04
RBL305 - 024	24	Locking	01
RBL305 - 025	25	Socket Head Cap Screw M8	02
RBL305 - 026	26	Washer M8	02
RBL305 - 027	27	Washer M8	02
RBL305 - 028	28	Socket Head Cap Screw M8	02
RBL305 - 029	29	Bracket	01
RBL305 - 030	30	Right Support Arm	01
RBL305 - 031	31	Hook	01
RBL305 - 032	32	Left Support Arm	01
RBL305 - 033	33	Bushing Ø16x106	01
RBL305 - 034	34	Pin Ø10x160	01
RBL305 - 035	35	Pin Ø14x180	01
RBL305 - 036	36	Washer M12	02
RBL305 - 037	37	Washer 24x14.5x3	02
RBL305 - 038	38	Washer M12	02
RBL305 - 039	39	Washer M12	02
RBL305 - 040	40	Nut M12	02
RBL305 - 041	41	Pin M14x190	01
RBL305 - 042	42	Bushing Ø21x108	01

