


SCISSOR LIFTER (ASL - 300)

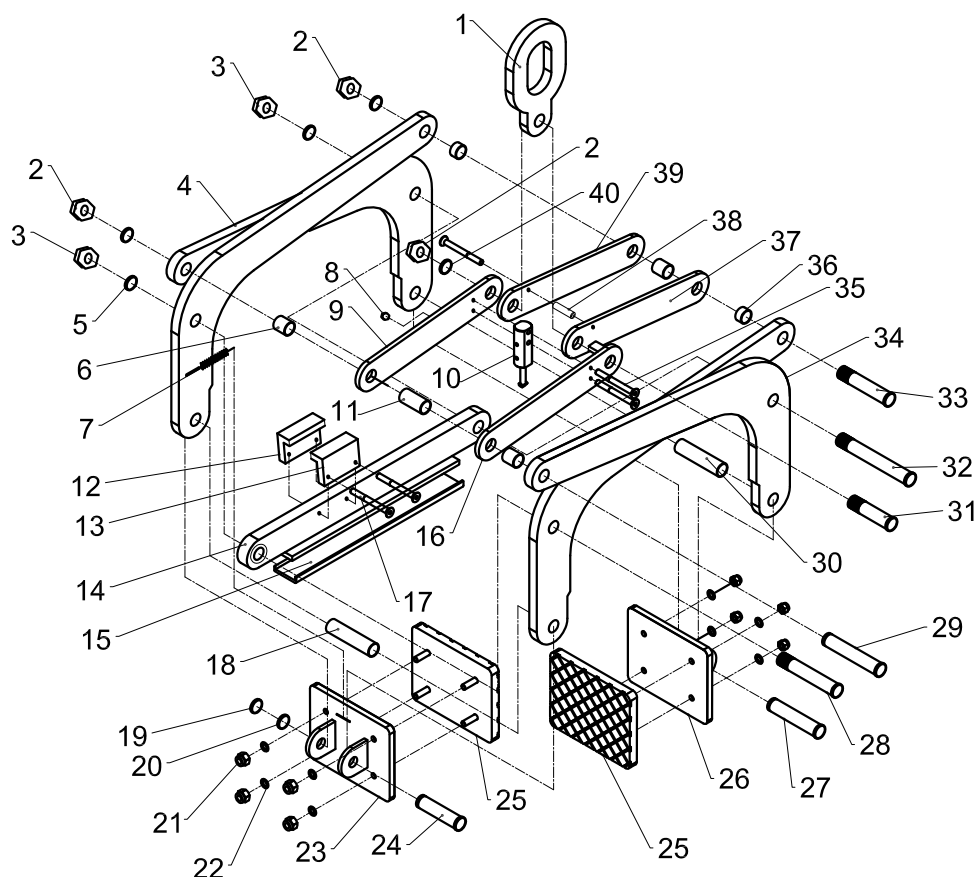

SPARE PARTS LIST

CODE	POS.	DESCRIPTION	QTY
ASL300 - 001	1	Hook	01
ASL300 - 002	2	Nylon Nut M16	03
ASL300 - 003	3	Nylon Nut M20	02
ASL300 - 004	4	Left Lower Arm	02
ASL300 - 005	5	Washer Ø20	05
ASL300 - 006	6	Spacing Pipe x 17mm	03
ASL300 - 007	7	Spring of Jaw	02
ASL300 - 008	8	Nylon Nut M8	01
ASL300 - 009	9	Left Upper Arm 1	01
ASL300 - 010	10	Locking	01
ASL300 - 011	11	Spacing Pipe x 34mm	01
ASL300 - 012	12	Left Locking Base	01
ASL300 - 013	13	Right Locking Base	01
ASL300 - 014	14	Limit Bar	01
ASL300 - 015	15	Rubber	01
ASL300 - 016	16	Left Upper Arm 2	01
ASL300 - 017	17	Countersunk Flat Head Screw M8x30	03
ASL300 - 018	18	Spacing Pipe x 50mm	01
ASL300 - 019	19	Circlip Ø20	02
ASL300 - 020	20	Copper Washer Ø20	02

CODE	POS.	DESCRIPTION	QTY
ASL300 - 021	21	Nylon Nut M10	08
ASL300 - 022	22	Washer Ø10	08
ASL300 - 023	23	Left Jaw	01
ASL300 - 024	24	Pin Ø20 x 107mm	01
ASL300 - 025	25	PU Pad	02
ASL300 - 026	26	Right Jaw	01
ASL300 - 027	27	Pin Ø20 x 140mm	01
ASL300 - 028	28	Bolt M20 x 111mm	01
ASL300 - 029	29	Bolt M16 x 140mm	01
ASL300 - 030	30	Spacing Pipe x 83mm	01
ASL300 - 031	31	Bolt M16 x 76mm	01
ASL300 - 032	32	Bolt M20 x 144mm	01
ASL300 - 033	33	Bolt M16 x 107mm	01
ASL300 - 034	34	Right Lower Arm	02
ASL300 - 035	35	Cross Recessed Pan Head Crew M8x50	02
ASL300 - 036	36	Spacing Pipe x 8mm	02
ASL300 - 037	37	Right Upper Arm 1	01
ASL300 - 038	38	Spacing Pipe x 17mm	01
ASL300 - 039	39	Right Upper Arm 2	01
ASL300 - 040	40	Washer Ø16	03

When ordering spare parts, please show the codes of parts and quantities on your purchase order.
For example: ASL300 - 007 , QTY 10
ASL300 - 016 , QTY 02