
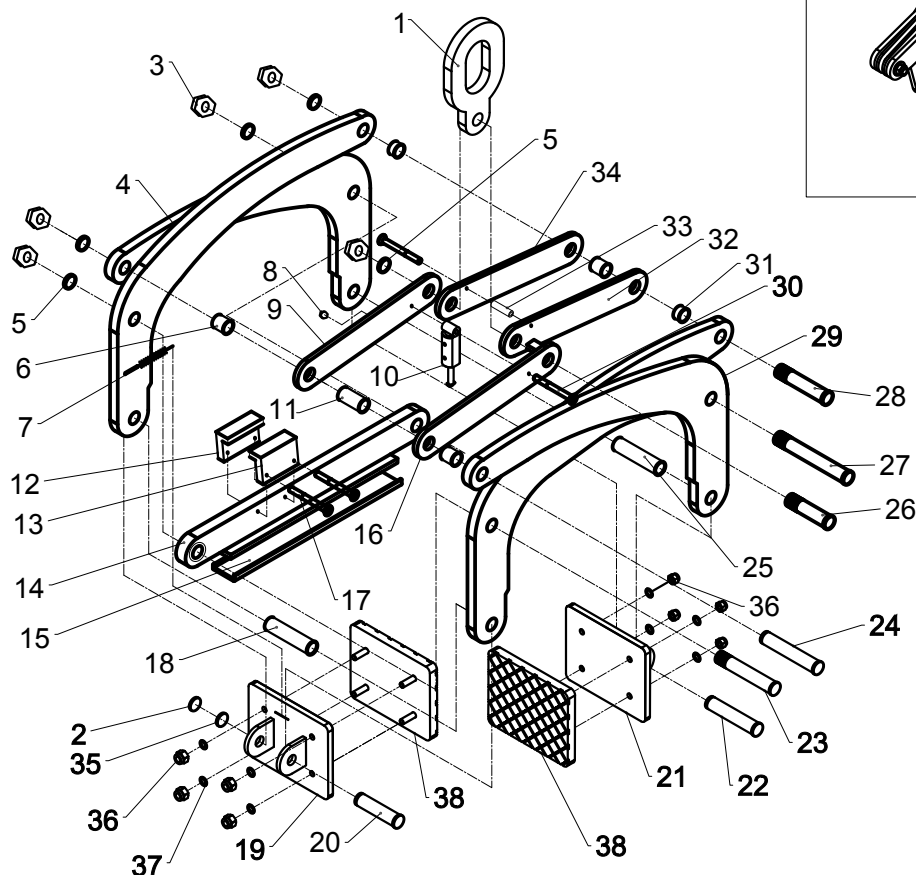


SCISSOR LIFTER (ASL - 450)

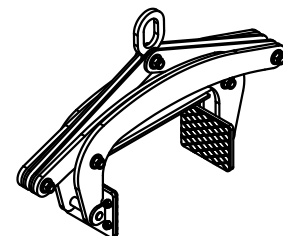

SPARE PARTS LIST

CODE	POS.	DESCRIPTION	QTY
ASL450 - 001	1	Hook	01
ASL450 - 002	2	Circlip Ø20	02
ASL450 - 003	3	Nylon Nut M20	05
ASL450 - 004	4	Left Lower Arm	02
ASL450 - 005	5	Washer Ø25	05
ASL450 - 006	6	Spacing Pipe x 17mm	03
ASL450 - 007	7	Spring of Jaw	02
ASL450 - 008	8	Nylon Nut M8	01
ASL450 - 009	9	Left Upper Arm 1	01
ASL450 - 010	10	Locking	01
ASL450 - 011	11	Spacing Pipe x 34mm	01
ASL450 - 012	12	Left Locking Base	01
ASL450 - 013	13	Right Locking Base	01
ASL450 - 014	14	Limit Bar	01
ASL450 - 015	15	Rubber	01
ASL450 - 016	16	Left Upper Arm 2	01
ASL450 - 017	17	Countersunk Flat Head Screw M8x30	03
ASL450 - 018	18	Spacing Pipe x 50mm	01
ASL450 - 019	19	Left Jaw	01

CODE	POS.	DESCRIPTION	QTY
ASL450 - 020	20	Pin Ø20 x 107mm	01
ASL450 - 021	21	Right Jaw	01
ASL450 - 022	22	Pin Ø20 x 140mm	01
ASL450 - 023	23	Pin Ø25 x 111mm	01
ASL450 - 024	24	Pin Ø25 x 123mm	01
ASL450 - 025	25	Spacing Pipe x 83mm	01
ASL450 - 026	26	Pin Ø25 x 57mm	01
ASL450 - 027	27	Pin Ø25 x 144mm	01
ASL450 - 028	28	Pin Ø25 x 90mm	01
ASL450 - 029	29	Right Lower Arm	02
ASL450 - 030	30	Cross Recessed Pan Head Crew M8x50	01
ASL450 - 031	31	Spacing Pipe x 8mm	02
ASL450 - 032	32	Right Upper Arm 1	01
ASL450 - 033	33	Spacing Pipe x 17mm	01
ASL450 - 034	34	Right Upper Arm 2	01
ASL450 - 035	35	Copper Washer Ø20	04
ASL450 - 036	36	Nylon Nut M10	08
ASL450 - 037	37	Washer Ø10	08
ASL450 - 038	38	PU Pad	02

When ordering spare parts, please show the codes of parts and quantities on your purchase order.
For example: ASL450 - 007 , QTY 10
ASL450 - 016 , QTY 02