


ASSEMBLY DIAGRAM

SELFLOCKING TROLLEY SL 100

(Mod: SL 100)

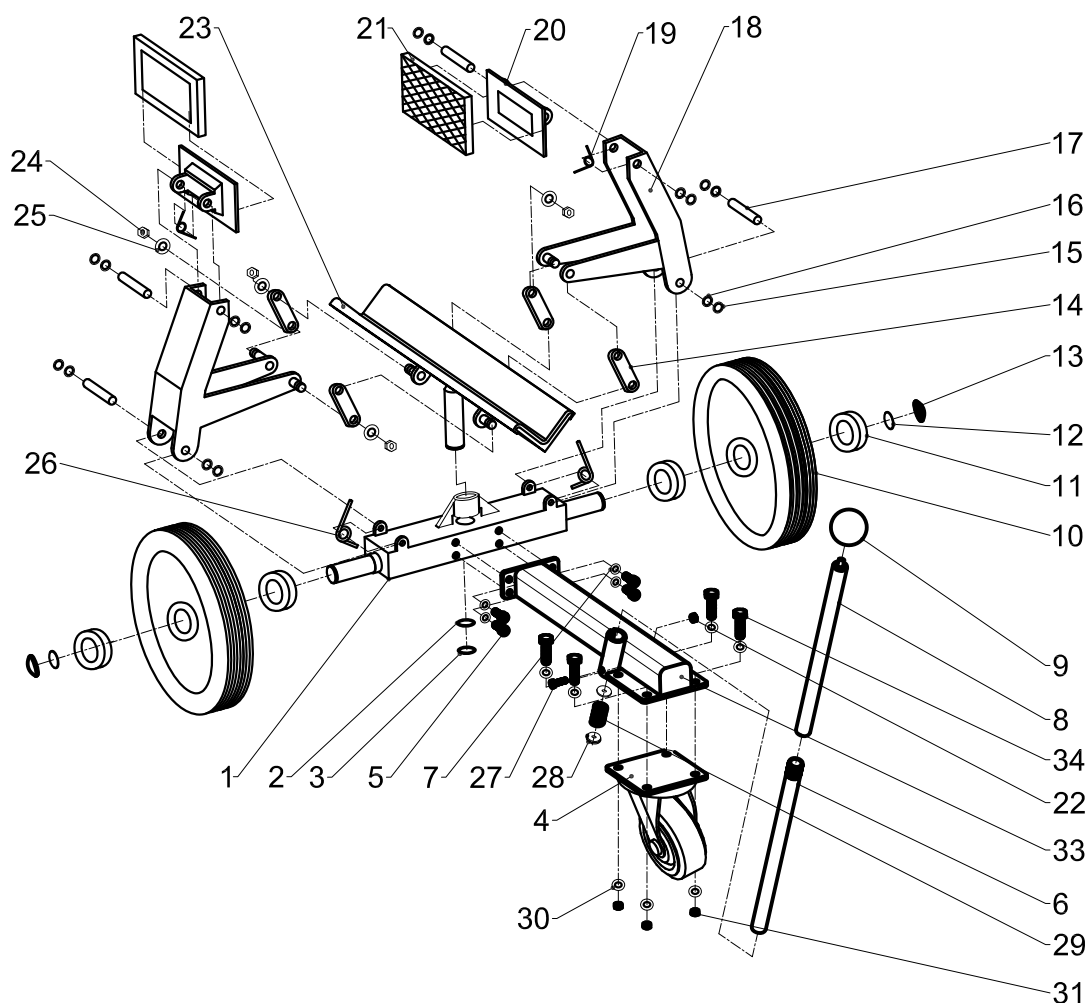

SPARE PARTS LIST

CODE	POS.	DESCRIPTION	QTY
SL100 - 001	1	Base	01
SL100 - 002	2	Copper washer Ø25	01
SL100 - 003	3	Circlips Ø25	01
SL100 - 004	4	Swivel caster (Locking type)	01
SL100 - 005	5	Hexagon socket head cap screw M8x20	04
SL100 - 006	6	Bottom handle (*)	01
SL100 - 007	7	Washer Ø8	04
SL100 - 008	8	Top handle (*)	01
SL100 - 009	9	Rubber handle (*)	01
SL100 - 010	10	Wheel 4.00-8	02
SL100 - 011	11	Bearing 6205	04
SL100 - 012	12	Copper washer Ø25	02
SL100 - 013	13	Dome axle caps Ø25	02
SL100 - 014	14	Connecting	04
SL100 - 015	15	Circlips Ø12	08
SL100 - 016	16	Copper washer Ø12	08
SL100 - 017	17	Arm pin	04

CODE	POS.	DESCRIPTION	QTY
SL100 - 018	18	Arm	02
SL100 - 019	19	Top spring	02
SL100 - 020	20	Jaw	02
SL100 - 021	21	Rubber pad	02
SL100 - 022	22	Hexagon nut M5	01
SL100 - 023	23	"V" carriage support	01
SL100 - 024	24	Hexagon nut M10	08
SL100 - 025	25	Washer Ø10	08
SL100 - 026	26	Bottom spring	02
SL100 - 027	27	Hexagon bolt M5 x 40	01
SL100 - 028	28	Limit washer Ø24 (*)	02
SL100 - 029	29	Compression spring (*)	01
SL100 - 030	30	Washer Ø10	08
SL100 - 031	31	Hexagon nut M10	04
SL100 - 032	32	Front base	01
SL100 - 033	33	Hexagon bolt M10x30	04
SL100 - 034	34	Hexagon nut M10x30	04

(*) Part universal for all Aardwolf Selflocking Trolley

When ordering, please give number of spare - part (code number) plus type of Selflocking Trolley.

For example: SL100 - 006 , QTY 02

SL100 - 021 , QTY 01