


AVLP2-500 - VACUUM LIFTER ASSEMBLY DIAGRAM

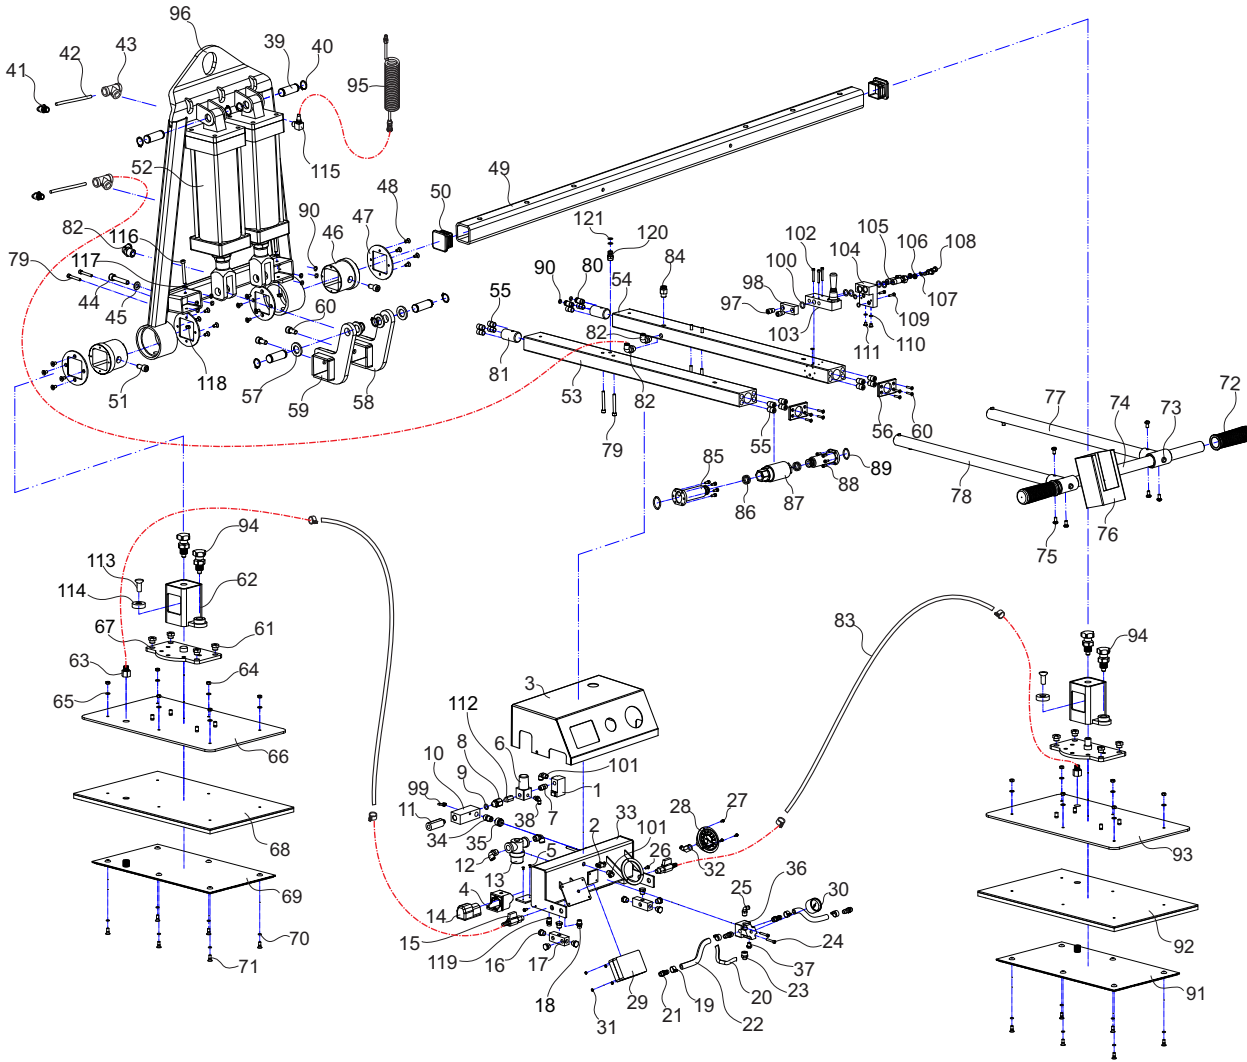

PARTS LIST

POSITION	CODE	DESCRIPTION	QTY.
1	AVLP2-500-001	VACUUM SWITCH	1
2	AVLP2-500-002	Y CONNECTION Ø6	1
3	AVLP2-500-003	COVER	1
4	AVLP2-500-004	BATTERY BASE	1
5	AVLP2-500-005	COUNTERSUNK HEAD M4x8	2
6	AVLP2-500-006	PRESSURE CONTROLLER	1
7	AVLP2-500-007	CONNECT MALE TUBE 1/4	1
8	AVLP2-500-008	NOZZLE	1
9	AVLP2-500-009	O-RING SEAL Ø12.8	1
10	AVLP2-500-010	VENTURI PUMP	1
11	AVLP2-500-011	PLASTIC SILENCER	1
12	AVLP2-500-012	L-CONNECT MALE Ø10x3/8	2
13	AVLP2-500-013	FILTER	1
14	AVLP2-500-014	BATTERY	1
15	AVLP2-500-015	BALL VALVE 1/4	2
16	AVLP2-500-016	COVER BOLT 1/4	8
17	AVLP2-500-017	DELIVER - A	2
18	AVLP2-500-018	AIR OUTER VALVE 1/4	1
19	AVLP2-500-019	COLLAR Ø16	8
20	AVLP2-500-020	COMPRESSED AIR HOSE Ø10	1
21	AVLP2-500-021	TAILPIECE - MALE Ø12x1/4	4
22	AVLP2-500-022	AIR HOSE Ø16-B	2
23	AVLP2-500-023	I-CONNECTOR TUBE Ø10x1/4	1
24	AVLP2-500-024	HEXAGON SOCKET HEAD CAP SCREW M5x30	2
25	AVLP2-500-025	ELBOW MALE TUBE Ø6x1/8	2
26	AVLP2-500-026	MACHINE SCREW M5x10	2
27	AVLP2-500-027	MACHINE SCREW M4x10	3
28	AVLP2-500-028	VACUUM GAUGE	1
29	AVLP2-500-029	WARNING HORN	1
30	AVLP2-500-030	AIR REGULATION GAUGE	1
31	AVLP2-500-031	NUT M4	4
32	AVLP2-500-032	ELBOW FEMALE TUBE Ø6x1/4	1
33	AVLP2-500-033	VACUUM TANK	1
34	AVLP2-500-034	CHECK VALVE	1
35	AVLP2-500-035	BUSH	1
36	AVLP2-500-036	DELIVER - B	1
37	AVLP2-500-037	QUICK CONNECTOR 1/8 - Ø4	1
38	AVLP2-500-038	ELBOW MALE TUBE Ø4x1/8	1
39	AVLP2-500-039	PIN Ø20x55	4
40	AVLP2-500-040	CIRCLIP Ø20	8
41	AVLP2-500-041	ELBOW MALE TUBE Ø10x1/2	2
42	AVLP2-500-042	AIR HOSE Ø10x100	2
43	AVLP2-500-043	TEE FEMALE TUBE FIT Ø10x1/2	2
44	AVLP2-500-044	HEXAGON SOCKET HEAD CAP SCREW M10x40	2
45	AVLP2-500-045	WASHER Ø10	2
46	AVLP2-500-046	PLASTIC BUSH	2
47	AVLP2-500-047	FLANGE	4
48	AVLP2-500-048	COUNTERSUNK SCREW M4x12	16
49	AVLP2-500-049	CROSS BAR	1
50	AVLP2-500-050	PLASTIC COVER	2
51	AVLP2-500-051	HEXAGON SOCKET HEAD CAP SCREW M10x20	4
52	AVLP2-500-052	CYLINDER SC80x200	2
53	AVLP2-500-053	HANDLE (LEFT)	1
54	AVLP2-500-054	HANDLE (RIGHT)	1
55	AVLP2-500-055	HOLE COVER - A	14
56	AVLP2-500-056	TUBE COVER	2
57	AVLP2-500-057	WASHER Ø20x3.5	4
58	AVLP2-500-058	ARM (RIGHT)	1
59	AVLP2-500-059	ARM (LEFT)	1
60	AVLP2-500-060	COUNTERSUNK FLAT HEAD SCREW M4x20	4
61	AVLP2-500-061	SPECIAL NUT M8	8
62	AVLP2-500-062	BRACKET	2
63	AVLP2-500-063	TAILPIE FEMALE 3/8x1/4	2
64	AVLP2-500-064	NYLON NUT M6	12
65	AVLP2-500-065	WASHER M6	12
66	AVLP2-500-066	LEFT VACUUM BASE	1
67	AVLP2-500-067	BRACKET BASE	2
68	AVLP2-500-068	LEFT VACUUM PAD	1
69	AVLP2-500-069	LEFT VACUUM LIMIT	1
70	AVLP2-500-070	RUBBER SEAL	12
71	AVLP2-500-071	COUNTERSUNK SCREW M6x16	12
72	AVLP2-500-072	RUBBER HANDLE	2
73	AVLP2-500-073	PUSH BUTTON	2
74	AVLP2-500-074	HANDLE ASSEMBLY	1
75	AVLP2-500-075	ROUND HEAD MACHINE SCREW M4x10	6
76	AVLP2-500-076	PENDANT CONTROL BRACKET	1
77	AVLP2-500-077	GUIDE ROD RIGHT	1
78	AVLP2-500-078	GUIDE ROD LEFT	1
79	AVLP2-500-079	HEXAGON SOCKET HEAD CAP SCREW M6x40	8
80	AVLP2-500-080	HOLE COVER - B	2
81	AVLP2-500-081	SHAFT	2
82	AVLP2-500-082	L-CONNECTOR MALE Ø10 - G1/4	3
83	AVLP2-500-083	AIR HOSE Ø16	2
84	AVLP2-500-084	I-CONNECTOR MALE Ø10 - G1/4	1
85	AVLP2-500-085	HANDLE CONNECTOR	2
86	AVLP2-500-086	O-RING OD22.36 - Ø2.62	4
87	AVLP2-500-087	SLIDE VALVE	1
88	AVLP2-500-088	HEXAGON SOCKET HEAD CAP SCREW M4x14	12
89	AVLP2-500-089	O-RING OD25.2 - Ø2.65	2
90	AVLP2-500-090	O-RING OD12 - Ø2.5	2
91	AVLP2-500-091	RIGHT VACUUM LIMIT	1
92	AVLP2-500-092	RIGHT VACUUM PAD	1
93	AVLP2-500-093	RIGHT VACUUM BASE	1
94	AVLP2-500-094	LATCH LOCKING	4
95	AVLP2-500-095	SPIRAL HOSE	1
96	AVLP2-500-096	BODY	1
97	AVLP2-500-097	SPECIAL BOLT	2
98	AVLP2-500-098	LEFT CONNECTION BOX	1
99	AVLP2-500-099	WIND NUT M6	1
100	AVLP2-500-100	O-RING OD17.5 - Ø2.5	5
101	AVLP2-500-101	L-CONNECTOR Ø6xG1/8	2
102	AVLP2-500-102	HEXAGON SOCKET HEAD CAP SCREW M4x30	3
103	AVLP2-500-103	HANDLE VALVE STNC TG35218-08C	1
104	AVLP2-500-104	RIGHT CONNECTOR BOX	1
105	AVLP2-500-105	PRESSURE CONTROLLER	2
106	AVLP2-500-106	LOCKING NUT	2
107	AVLP2-500-107	O-RING OD6.56 - Ø1.78	2
108	AVLP2-500-108	ADJUSTABLE KNOB	2
109	AVLP2-500-109	HEXAGON SOCKET HEAD CAP SCREW M4x16	2
110	AVLP2-500-110	O-RING OD9.5 - Ø1.7	5
111	AVLP2-500-111	COVER SCREW	2
112	AVLP2-500-112	CONNECTOR MALE 1/4	1
113	AVLP2-500-113	COUNTERSUNK SCREW M10x25	2
114	AVLP2-500-114	WASHER	2
115	AVLP2-500-115	AIR CONNECTOR	1
116	AVLP2-500-116	HEXAGON SOCKET HEAD CAP SCREW M6x55	2
117	AVLP2-500-117	WASHER Ø6	2
118	AVLP2-500-118	NYLON NUT M6	2
119	AVLP2-500-119	QUICK CONNECTOR 1/4	1
120	AVLP2-500-120	CONNECTOR 1/4	1
121	AVLP2-500-121	O-RING OD12.5 - F1.5	2